FAX-L200
FAX-L280
PARTS CATALOG

REVISION 0

FAX-L200	H12-2033	230V	EC
FAX-L200	H12-2034	230V	UK
FAX-L200	H12-2035	230V	GER
FAX-L200	H12-2037	230V	FRN
FAX-L280	H12-2043	230V	EC
FAX-L280	H12-2044	230V	UK
FAX-L280	H12-2045	230V	GER
FAX-L280	H12-2047	230V	FRN
TELEPHONE 6 KIT	H12-3603	230V	EU
TELEPHONE 6 KIT	H12-3614	230V	UK

Canon

FEB. 2001 **HY8-30AM-000**

COPYRIGHT © 2001 CANON INC.

CANON FAX-L200/L280 FEB. 2001 PRINTED IN JAPAN (IMPRIME AU JAPON)

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the content of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new editions of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names described in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

Copyright © 2001 by Canon Inc.

CANON INC.
Office Imaging Consumer Products Quality Assurance Dept. 1
5-1 Hakusan 7-Chome, Toride-city, Ibaraki 302-8501, Japan

DTP System

The data contained on this manual were created using Windows 95 computers.
Document creation and page layout were performed using Adobe® PageMaker® 6.5.
Logos and illustrations were created using Adobe® Illustrator® 9.0J.

I. CONTENTS

1. ILLUSTRATION INDEX
2. PARTS LAYOUT & PARTS LIST
3. TOOL
4. LUBRICATIONS
5. NUMERICAL INDEX

II. ABOUT THIS MANUAL

1. ILLUSTRATION INDEX

For illustration index, the parts layout illustrations in this parts catalog are listed in abbreviated form in order of illustration number to identify the pages they appear on. To find an illustration of a part, see the ILLUSTRATION INDEX.

2. PARTS LAYOUT & PARTS LIST

Parts layout illustration

a) Parts search

Find a part from the parts layout illustration and find its key number from the parts list to identify the part number and name.
Further, screws, nuts, washers, grip rings, pins and spacers are mentioned in the parts list.

Note: If parts have the same or similar shape but different specifications, their key number is assigned to several part numbers and names in the parts list.

b) Parts replacement procedure

The parts layout illustrations are arranged according to the disassembly procedure of the product.
When a unit in the illustration can be disassemble further, a reference illustration page of the disassembly will be included.
Parts where grease is to be applied are displayed as "Lubrication". When replacing parts, or if grease has accidentally been wiped off, refer to "4". (Lubrications), and reapply the grease.
The letters (A , B etc.) in the illustration indicate the connection locations of cables and screws.

Parts list

a) FIGURE & KEY No.

The FIGURE & KEY No. column corresponds to the key numbers assigned to the parts in the parts layout illustration.
It also corresponds to the part locations printed on the PC board.

b) PART NUMBER

The PART NUMBER column gives the part numbers corresponding to the key numbers. To order a part, indicate the part number clearly.
Note: Parts marked NPN are not service parts.

c) RANK

The service parts with N in the RANK column are order parts.

d) QTY

The QTY column gives the number of parts in the corresponding components layout illustration.

e) DESCRIPTION

The DESCRIPTION column gives the part names in English.
To order a part, indicate the part name, too.

3. TOOL

This is a list of tools used for servicing products.

4. LUBRICATIONS

Where grease is to be applied in order to allow moving parts to work smoothly, and to increase conductivity, the type and amount of grease to be used will be mentioned.

5. NUMERICAL INDEX

All the parts listed in this parts catalog are arranged in order of part number. You can identify part locations and names from the NUMERICAL INDEX.

This page intentionally left blank

1. ILLUSTRATION INDEX

FIGURE 1	PACKAGE CONTENTS	See Page 2-1	
FIGURE 2	COVERS & TRAY ASS'Y	See Page 2-3	
FIGURE 3	READING ASS'Y & MAIN FRAME	See Page 2-5	
FIGURE 4	CIRCUIT BOARDS & MAIN FRAME	See Page 2-7	

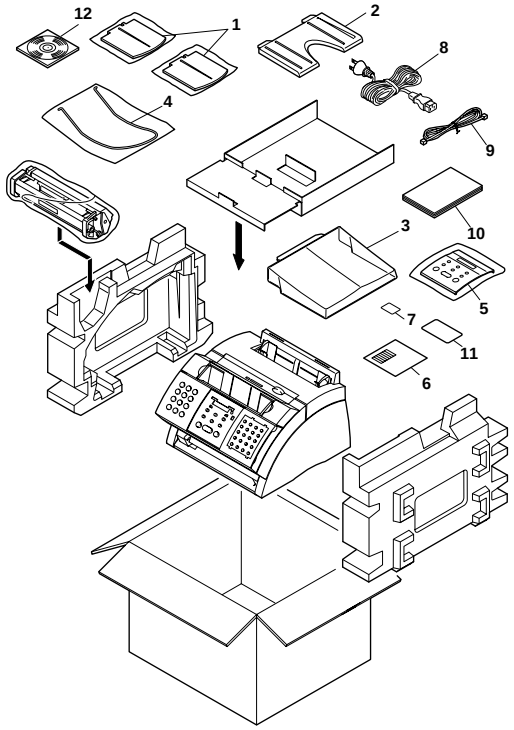

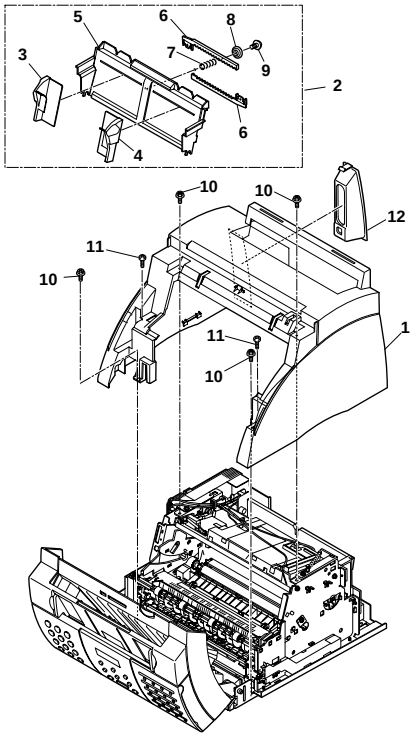

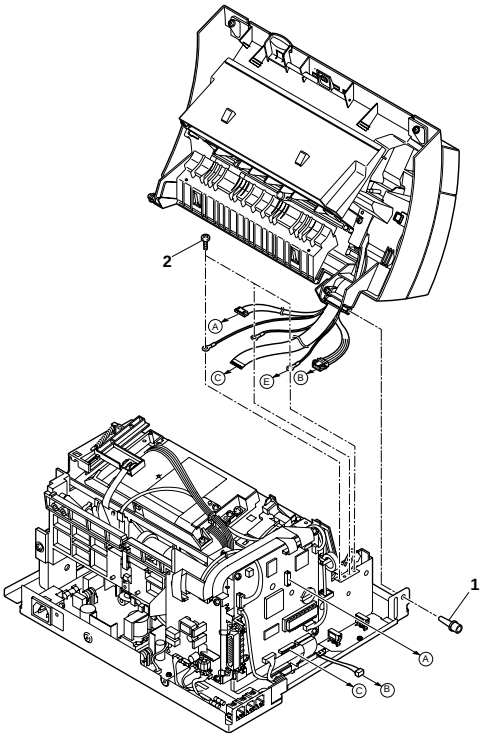

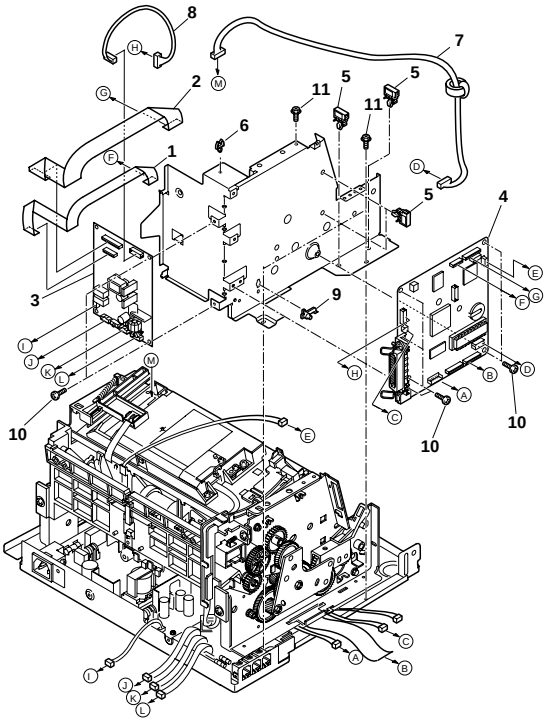

FIGURE 5 CIRCUIT BOARDS & BOTTOM PLATE	See Page 2-9

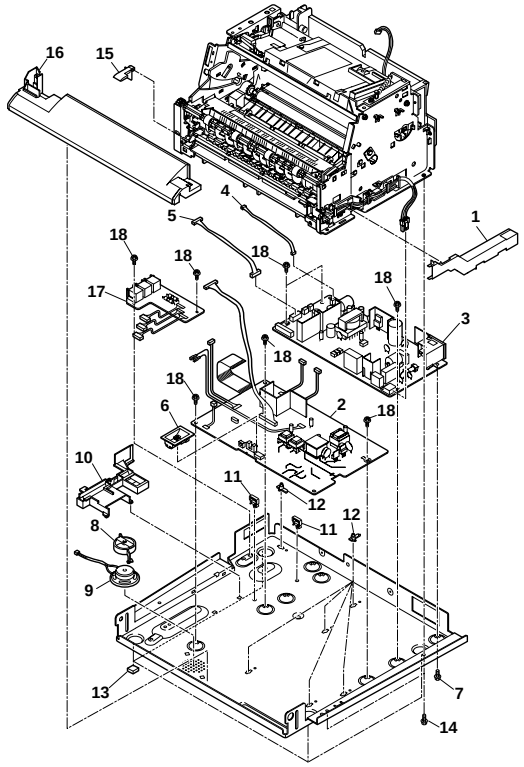

FIGURE 6 READING ASS'Y 1	See Page 2-11

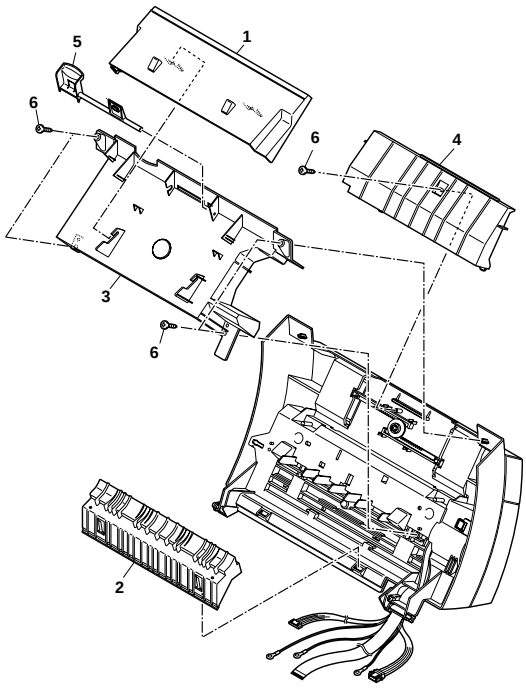

FIGURE 7 READING ASS'Y 2	See Page 2-13

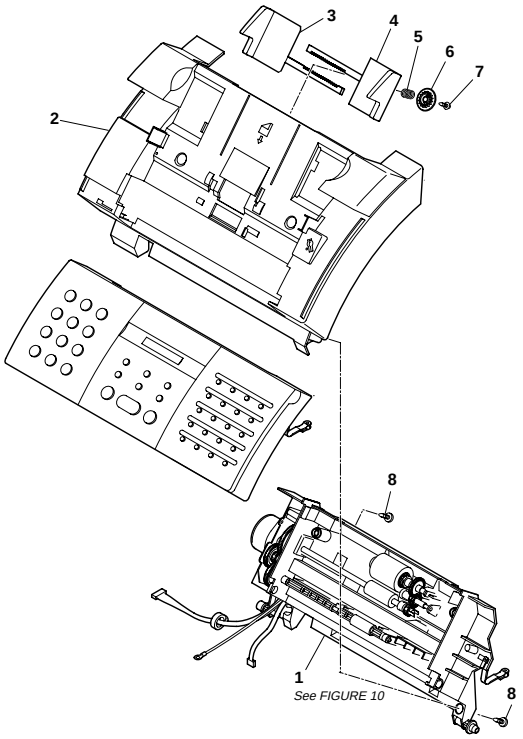

FIGURE 8 OPERATION PANEL ASS'Y & ADF UPPER	See Page 2-15

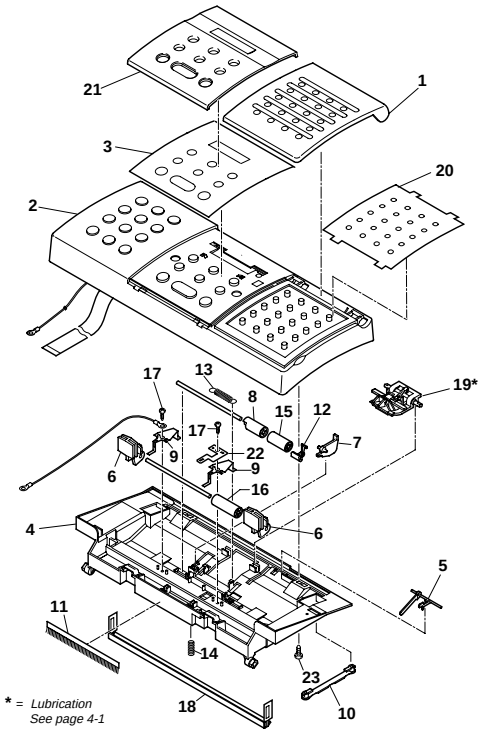

FIGURE 9 OPERATION PANEL ASS'Y	See Page 2-17

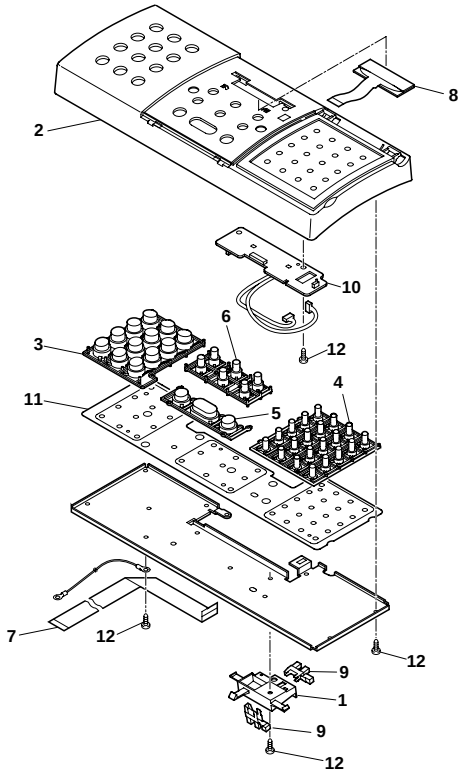

FIGURE 10 ADF LOWER	See Page 2-19

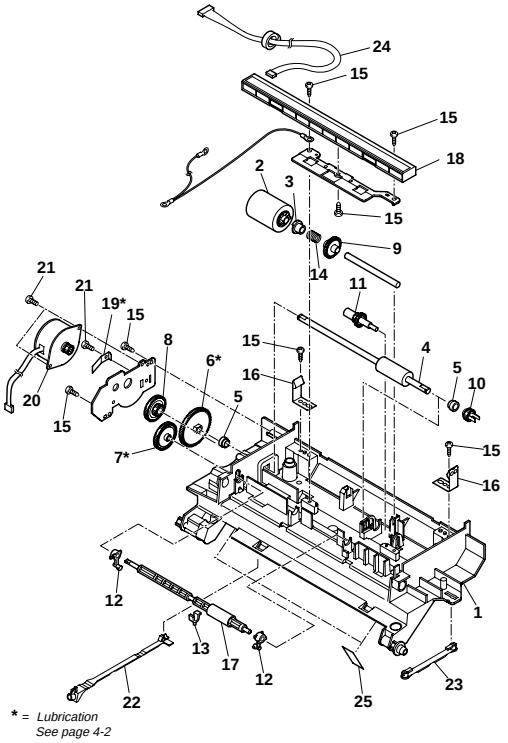

FIGURE 11 SCANNER ASS'Y	See Page 2-21

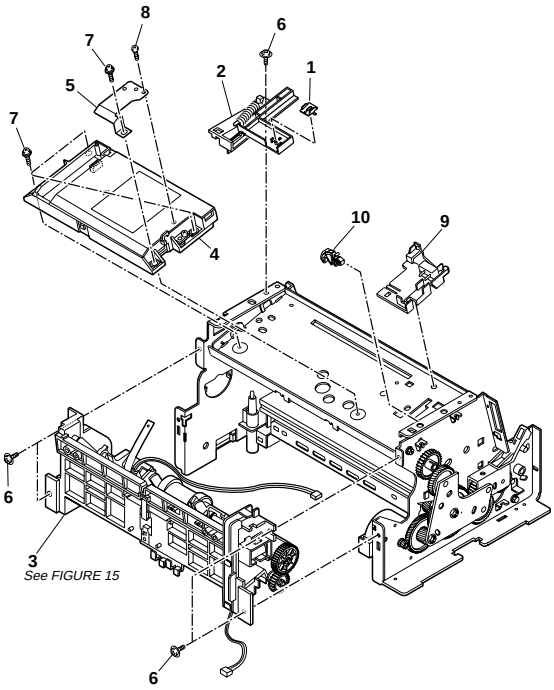

FIGURE 12 FIXING SECTION 1	See Page 2-23

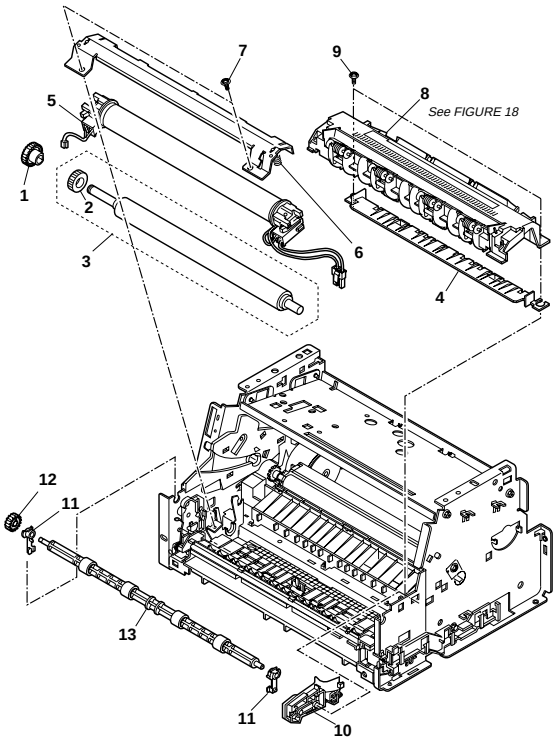

FIGURE 13 DRIVE GEARS

See Page 2-25

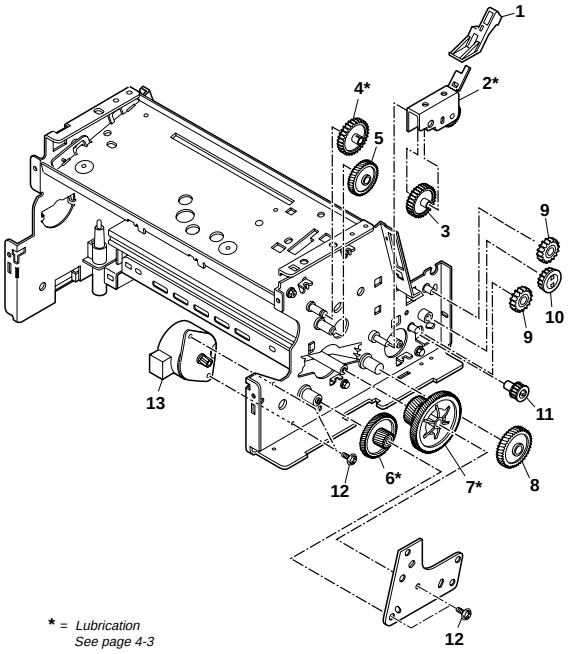

FIGURE 14 FIXING SECTION 2

See Page 2-27

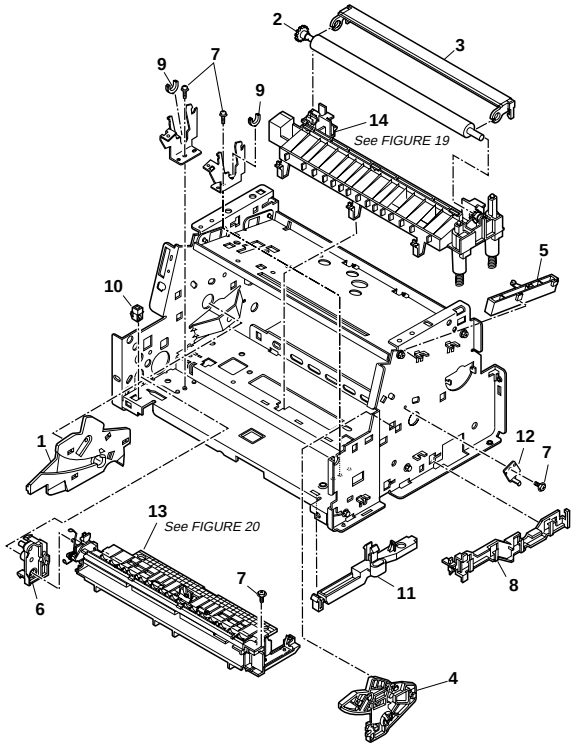

FIGURE 15 PAPER FEED SECTION

See Page 2-29

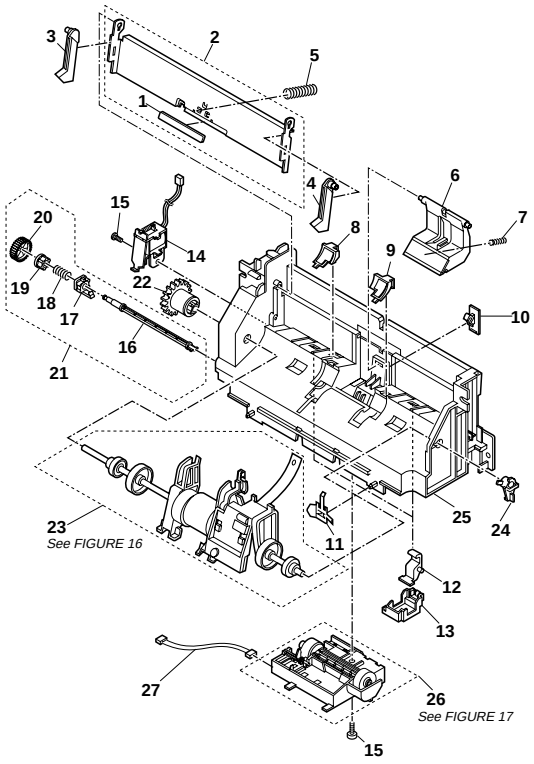

FIGURE 16 PICK-UP ROLLER ASS'Y

See Page 2-31

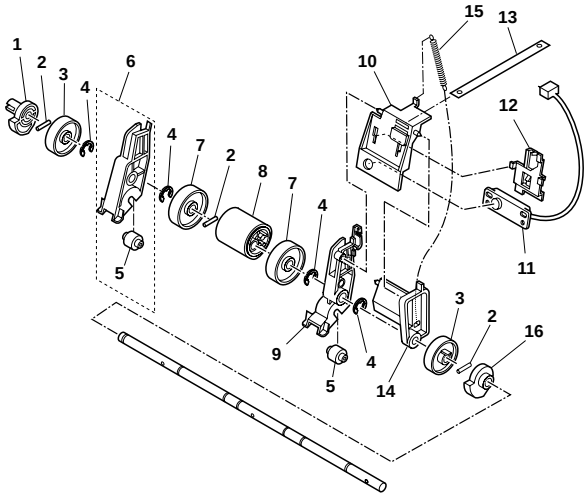

FIGURE 17 FEEDER ASS'Y	See Page 2-33
FIGURE 18 DELIEVRY ASS'Y	See Page 2-35
FIGURE 19 TRANSFER BLOCK ASS'Y	See Page 2-37
FIGURE 20 SEPARATION GUIDE ASS'Y (RECORDING)	See Page 2-39

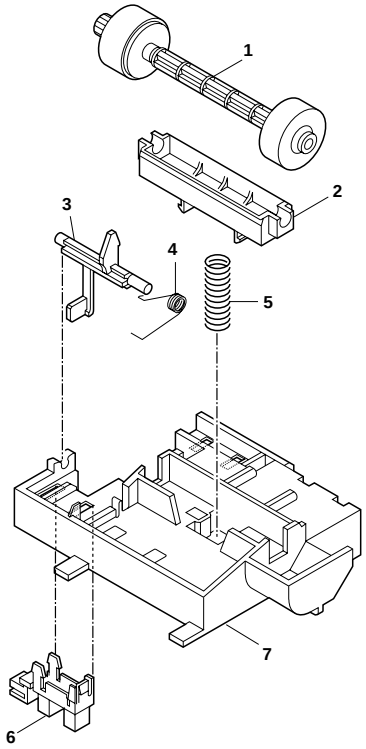

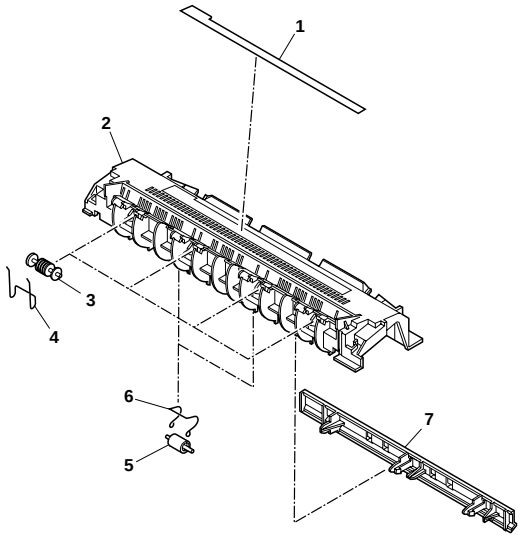

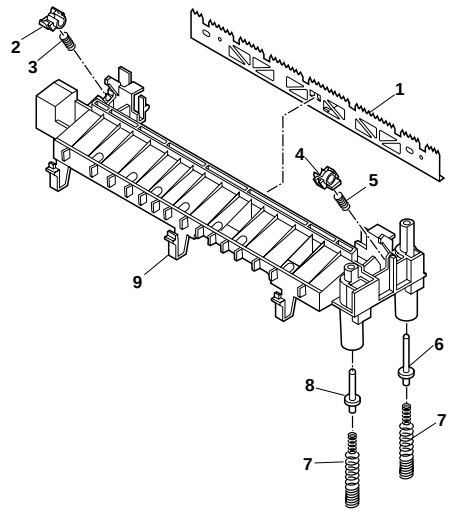

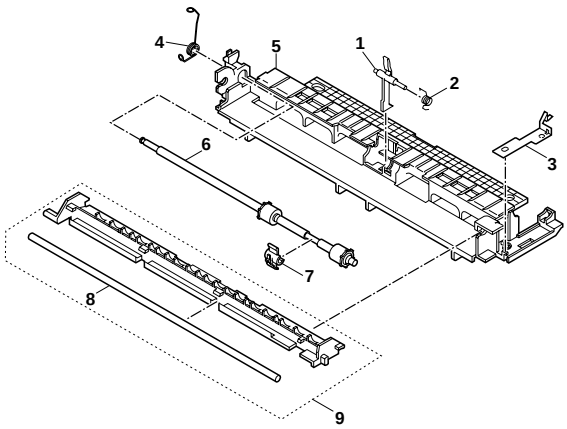

FIGURE 21 SCNT BOARD ASS'Y (FAX-L200)	See Page 2-41

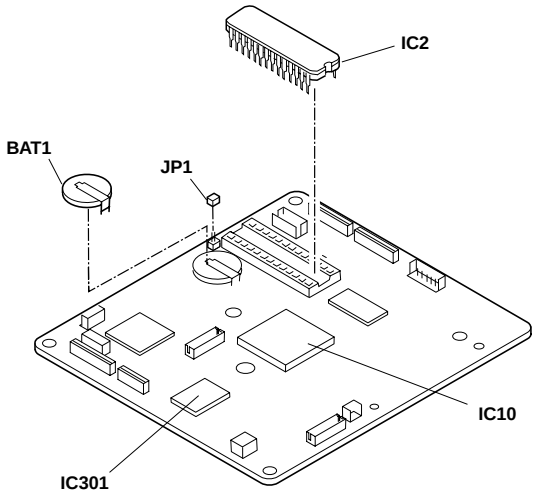

FIGURE 22 SCNT BOARD ASS'Y (FAX-L280)	See Page 2-43

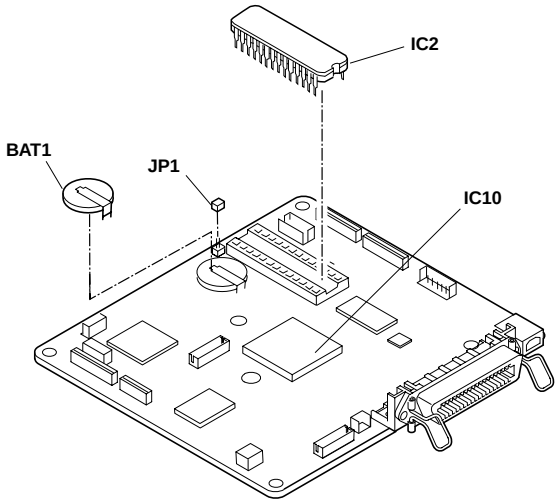

FIGURE 23 PCNT BOARD ASS'Y	See Page 2-45

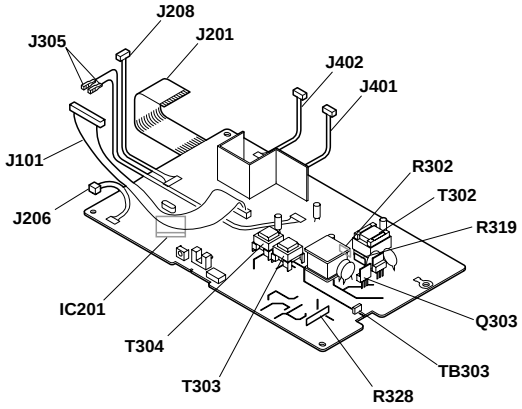

FIGURE 24 NCU BOARD ASS'Y	See Page 2-47

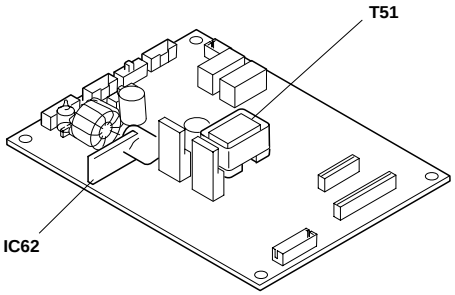

FIGURE 25 MODULAR BOARD ASS'Y	See Page 2-49	**FIGURE 26** OPCNT BOARD ASS'Y	See Page 2-51
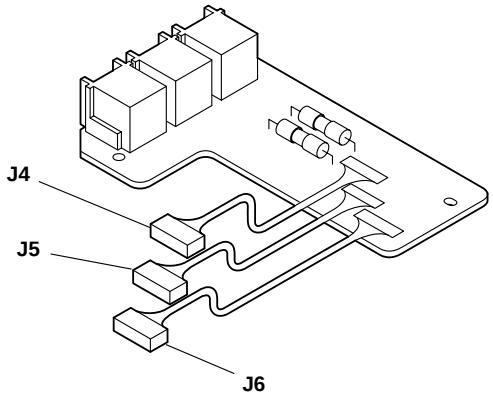		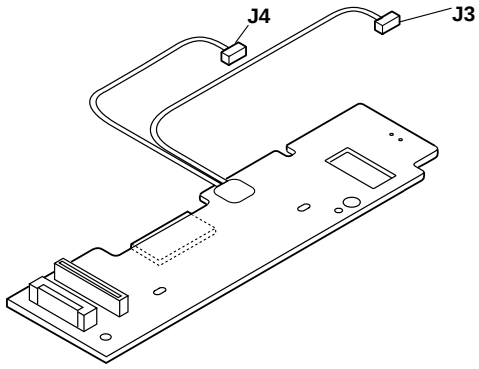	
FIGURE 27 TELEPHONE 6 KIT	See Page 2-53	**FIGURE 28** TOOLS	See Page 3-1
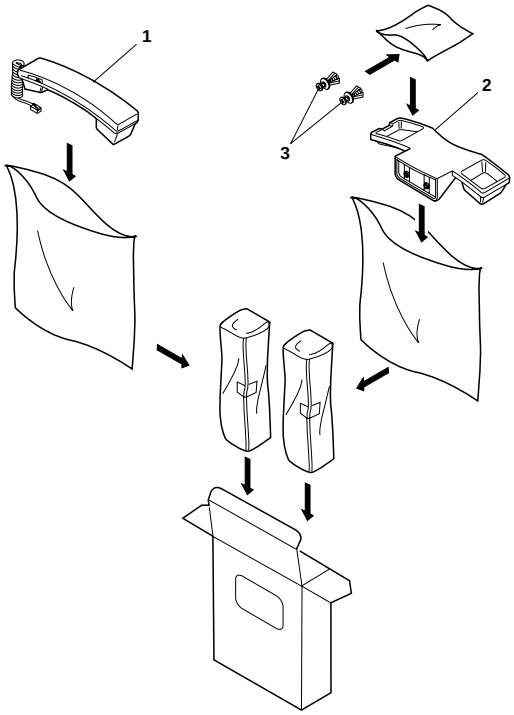		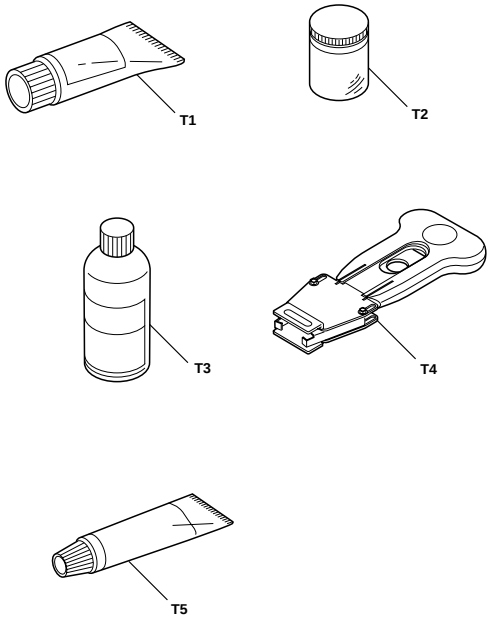	

This page intentionally left blank

2. PARTS LAYOUT & PARTS LIST

FIGURE 1 PACKAGE CONTENTS

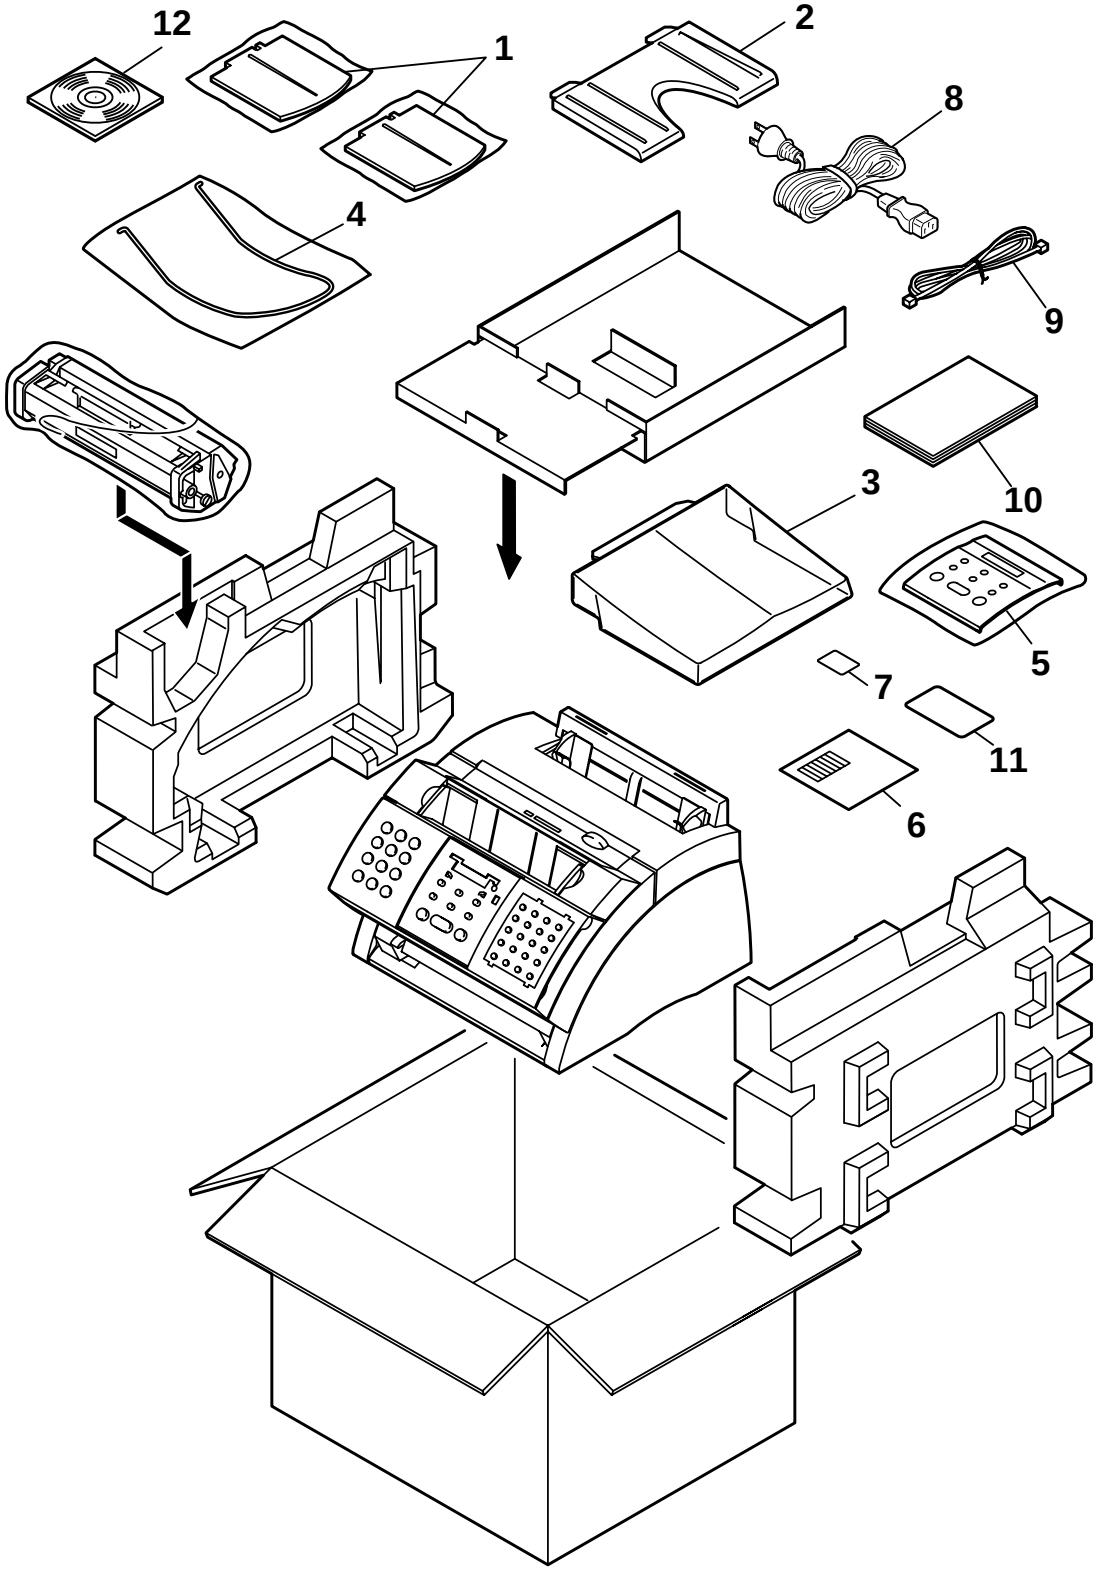

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
1 - 1	HB1-4818-000		2	TRAY, SUPPORT	
2	HB1-4819-000		1	TRAY, MULTI-PURPOSE	
3	HB1-4820-000		1	COVER, MULTI-PURPOSE TRAY	
4	HB1-4821-000		1	SUPPORT, DOCUMENT	
5	HB1-4822-000		1	COVER, OPERATION	FAX-L280/EC
	HB1-4855-000		1	COVER, OPERATION	FAX-L200/EC
6	HB1-4357-000		1	LABEL, DESTINATION	
7	HA2-0868-000		1	LABEL, MERCURY	UK
8	WT3-5020-000		1	CORD, POWER	GER FRN
	WT3-5058-000		1	CORD, POWER	UK
9	HH2-1914-000		1	MODULAR CORD, 6P	UK
	HH2-2074-000		1	MODULAR CORD (GERM)	GER
	HH2-2219-000		1	MODULAR CORD	FRN
10	HT1-2166-000	N	1	USER'S GUIDE (ENGLISH)	UK
	HT1-3099-000	N	1	USER'S GUIDE (MODELE FRANCE)	FRN
	HT1-5075-000	N	1	USER'S GUIDE (DEUTSCH)	GER
11	HB1-4854-000		1	LABEL, WARNING	
12	HH4-3512-000	N	1	CD-ROM, DRIVER SOFTWARE	FAX-L280

FIGURE 2 COVERS & TRAY ASS'Y

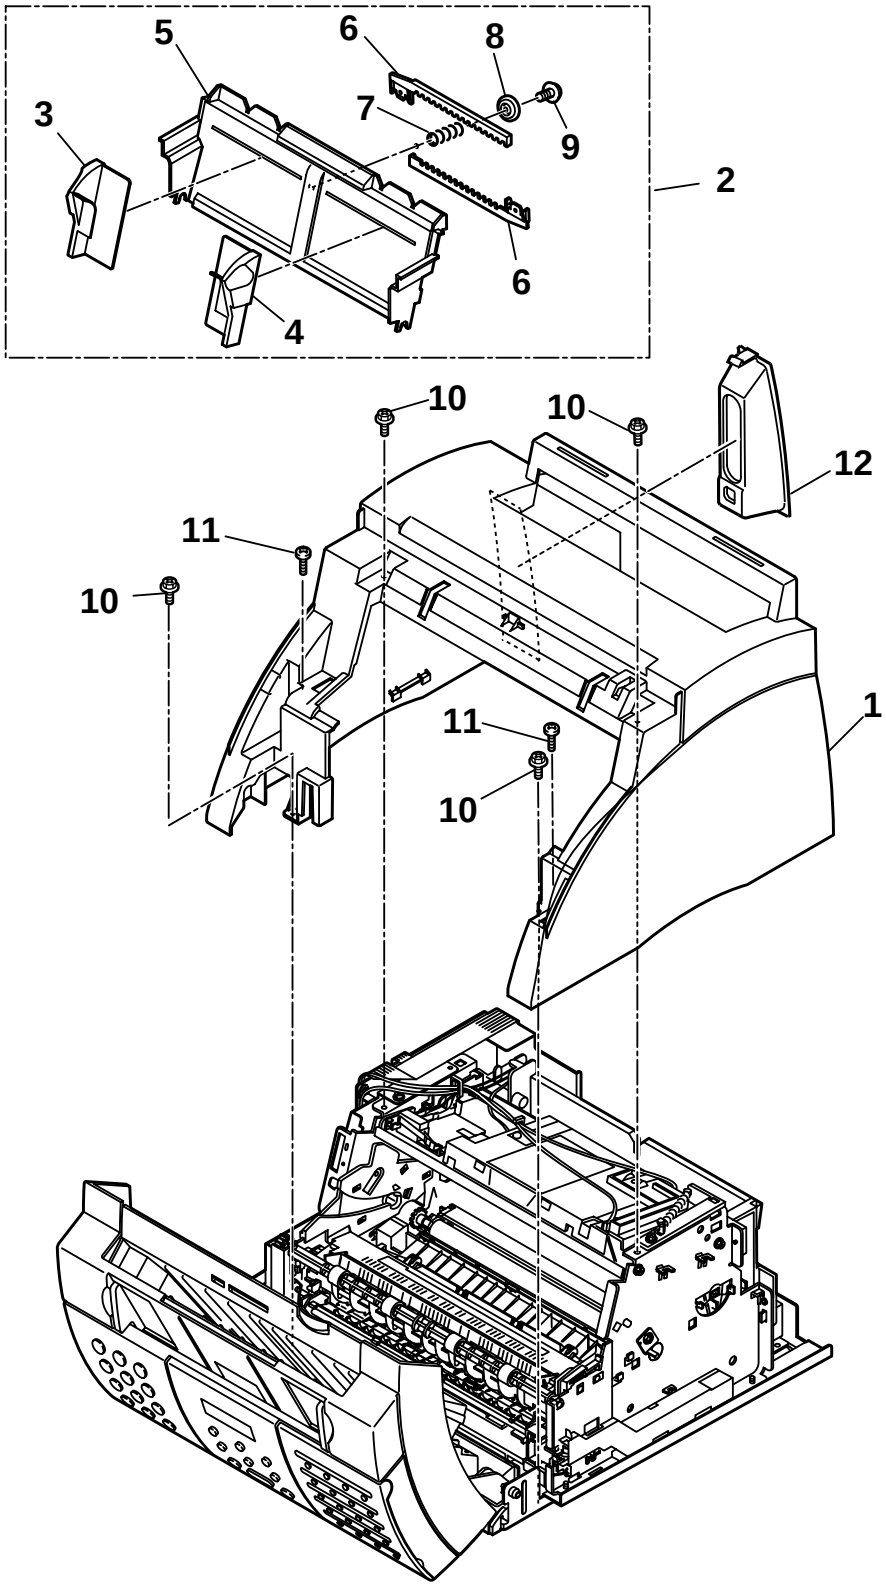

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
2 - 1	HB1-4813-000		1	COVER, MAIN	FAX-L280
	HB1-4814-000		1	COVER, MAIN	FAX-L200
2	HG5-2549-000		1	AUTO PAPER FEED ASS'Y	
3	HB1-4827-000		1	GUIDE, AUTO PAPER FEED, LEFT	
4	HB1-4828-000		1	GUIDE, AUTO PAPER FEED, RIGHT	
5	HB1-4826-000		1	TRAY, AUTO PAPER FEED	
6	HB1-3008-000		2	RACK	
7	HS5-2141-020		1	SPRING, SLIDER	
8	HS5-0254-000		1	GEAR, Z16	
9	XA9-0476-000		1	SCREW, TP M3X8	
10	XA9-0931-000		4	SCREW, RS, M3X12	
11	XB4-7301-409		2	SCREW, TAPPING M3X14	
12	HB1-4816-000		1	COVER, CONNECTOR	FAX-L280

FIGURE 3 READING ASS'Y & MAIN FRAME

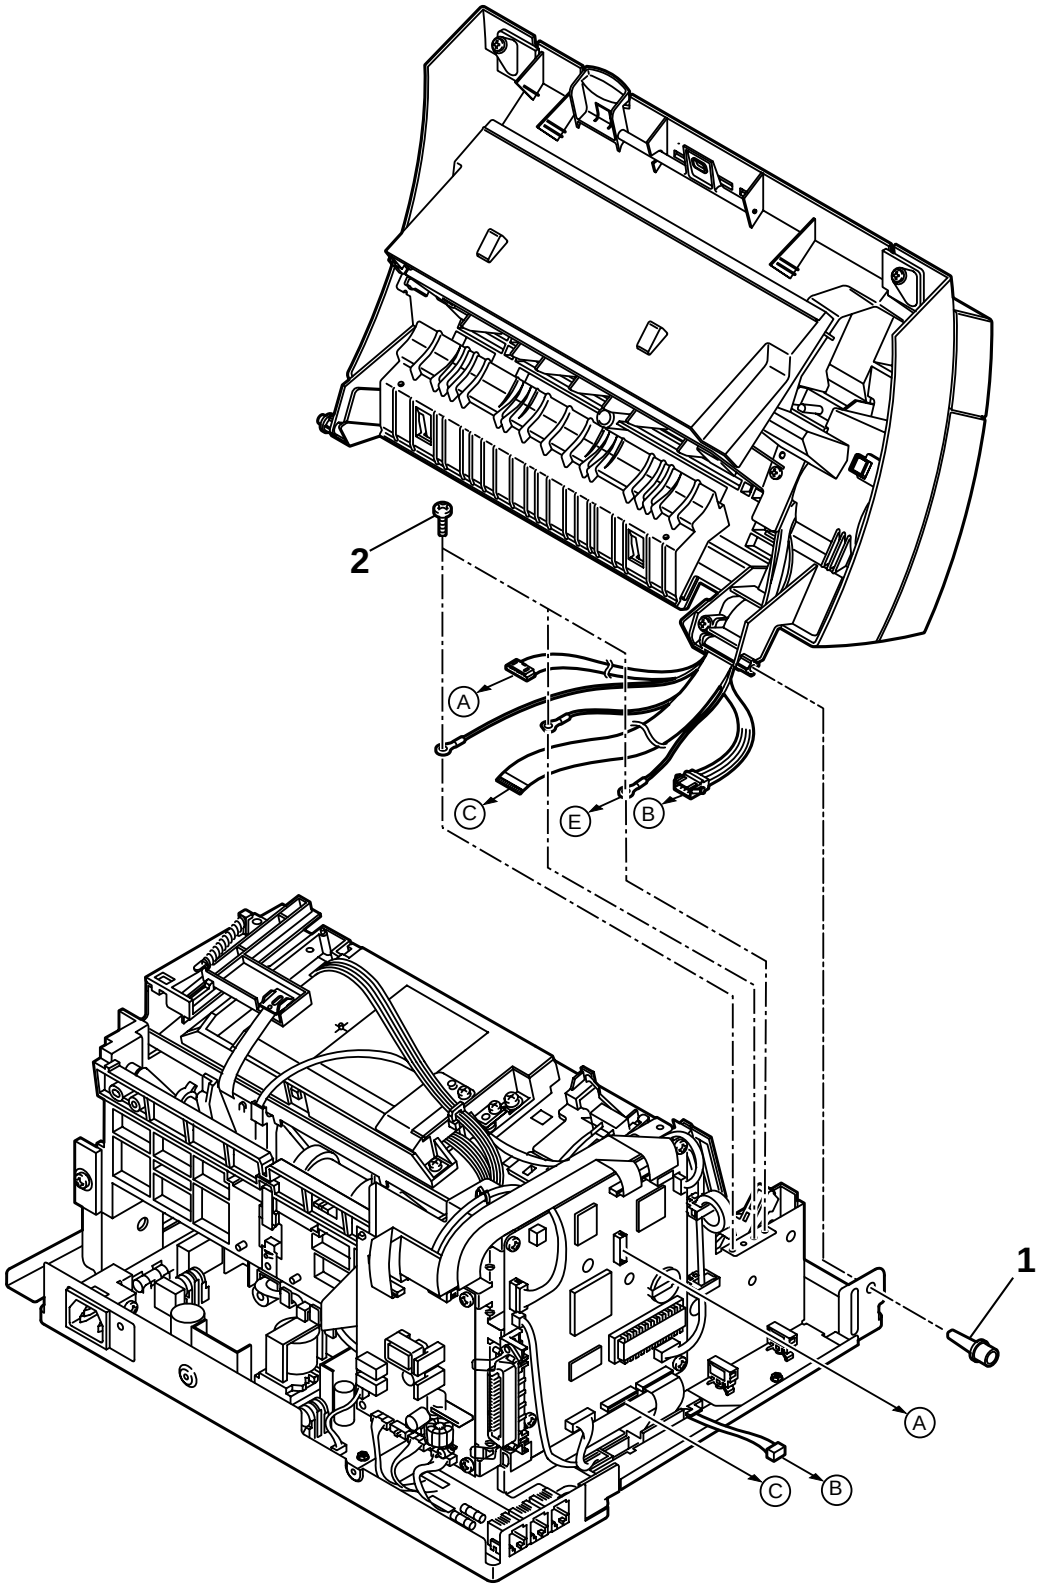

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
3 - 1	HB1-2991-000		1	PIN, TAPER	
2	XB1-2300-807		3	SCREW, CROSS-RECESS, FCH	

FIGURE 4 CIRCUIT BOARDS & MAIN FRAME

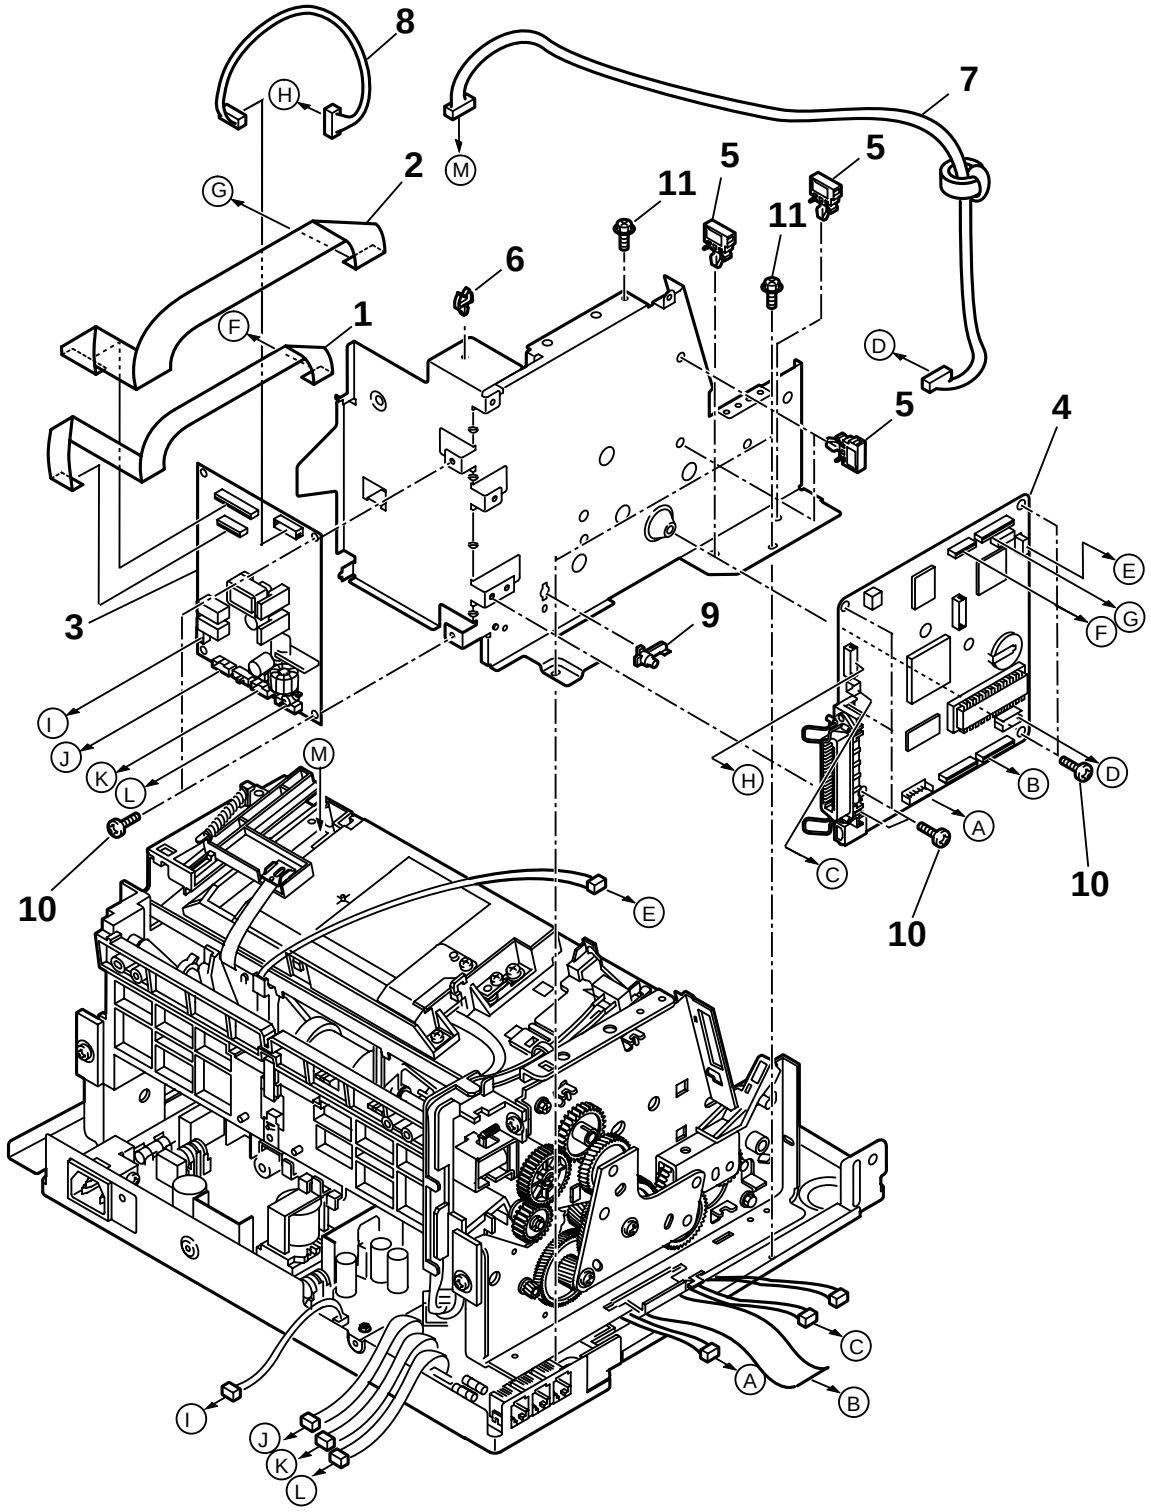

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
4 - 1	HH2-3056-000		1	CABLE, FLAT, 14P	
2	HH2-3057-000		1	CABLE, FLAT, 23P	
3	HG5-2587-000		1	NCU BOARD ASS'Y	
4	HG5-2565-000		1	SCNT BOARD ASS'Y	FAX-L280
	HG5-2566-000		1	SCNT BOARD ASS'Y	FAX-L200
5	WT2-0317-000		4	CLIP, CABLE	
6	WT2-5026-000		1	CLIP, CABLE	
7	HG5-2699-000		1	CABLE WITH CONNECTOR, 6P	
8	HG5-2573-000		1	CABLE WITH CONNECTOR, 6P	
9	HB1-4361-000		1	SPACER	
10	XB1-2300-807		8	SCREW, CROSS-RECESS, FCH	
11	XA9-0863-000		3	SCREW, TAP M3X6	

FIGURE 5 CIRCUIT BOARDS & BOTTOM PLATE

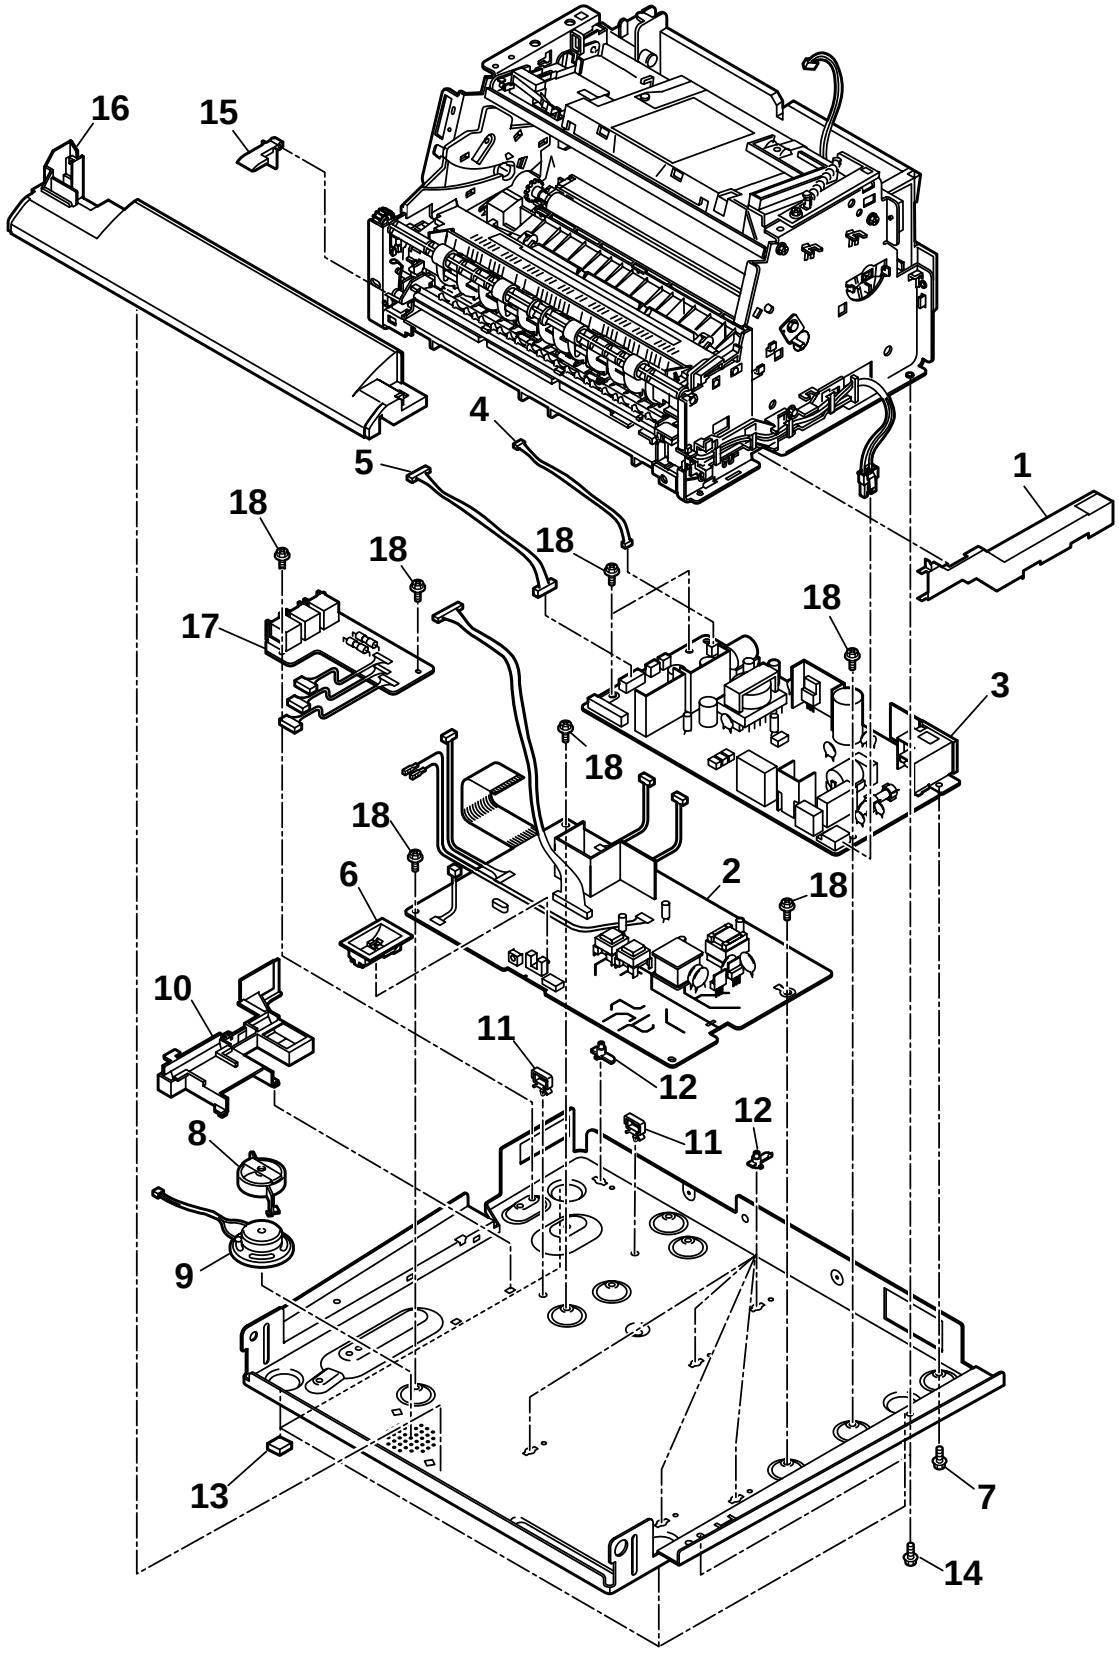

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
5 - 1	RB1-7344-020		1	COVER, AC CABLE	
2	HG5-2563-000		1	PCNT BOARD ASS'Y	
3	HH3-5365-000		1	POWER SUPPLY UNIT	
4	HG5-2582-000		1	CABLE WITH CONNECTOR, 2P	
5	HG5-2567-000		1	CABLE WITH CONNECTOR, 7P	
6	RB2-6220-000		1	COVER, WATERPROOF	
7	XB2-7300-607		1	SCREW, M3X6	
8	HB1-3023-000		1	HOLDER, SPEAKER	
9	HG5-2561-000		1	SPEAKER UNIT	
10	HB1-4824-000		1	GUIDE, CABLE	
11	WT2-0317-000		2	CLIP, CABLE	
12	HB1-4361-000		6	SPACER	
13	HB1-4704-000		4	FOOT, PRINTER	
14	XB3-6300-800		4	SCREW, RS, M3X8	
15	HB1-4817-000		1	LEVER, FLAPPER	
16	HB1-4815-000		1	COVER, FRONT	
17	HG5-2562-000		1	MODULAR BOARD ASS'Y	
18	XA9-0863-000		8	SCREW, TAP M3X6	

FIGURE 6 READING ASS'Y 1

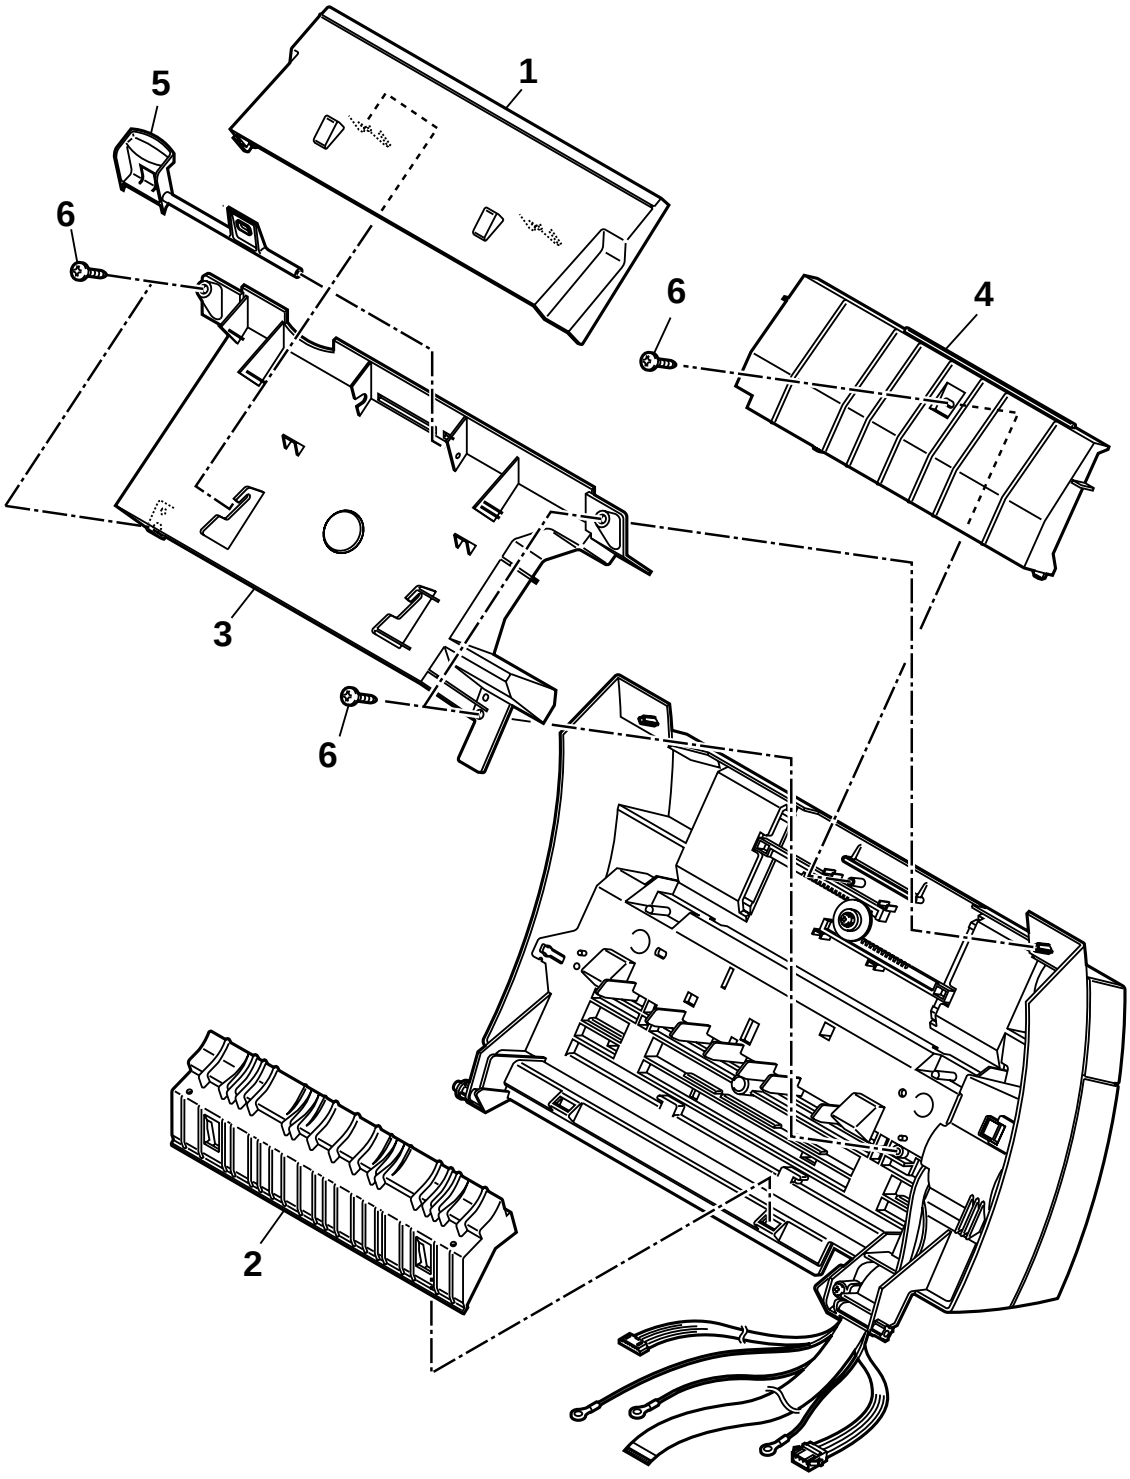

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
6 - 1	HB1-4324-000		1	DUCT, AIR	
2	HB1-4830-000		1	GUIDE, FACE DOWN	
3	HB1-4835-000		1	DUCT, AIR	
4	HB1-4832-000		1	GUIDE, PAPER EJECT	
5	HB1-4836-000		1	LEVER, ADF RELEASE	
6	XB4-7401-007		5	SCREW, PAN HEAD SELF-TAPPING	

FIGURE 7 READING ASS'Y 2

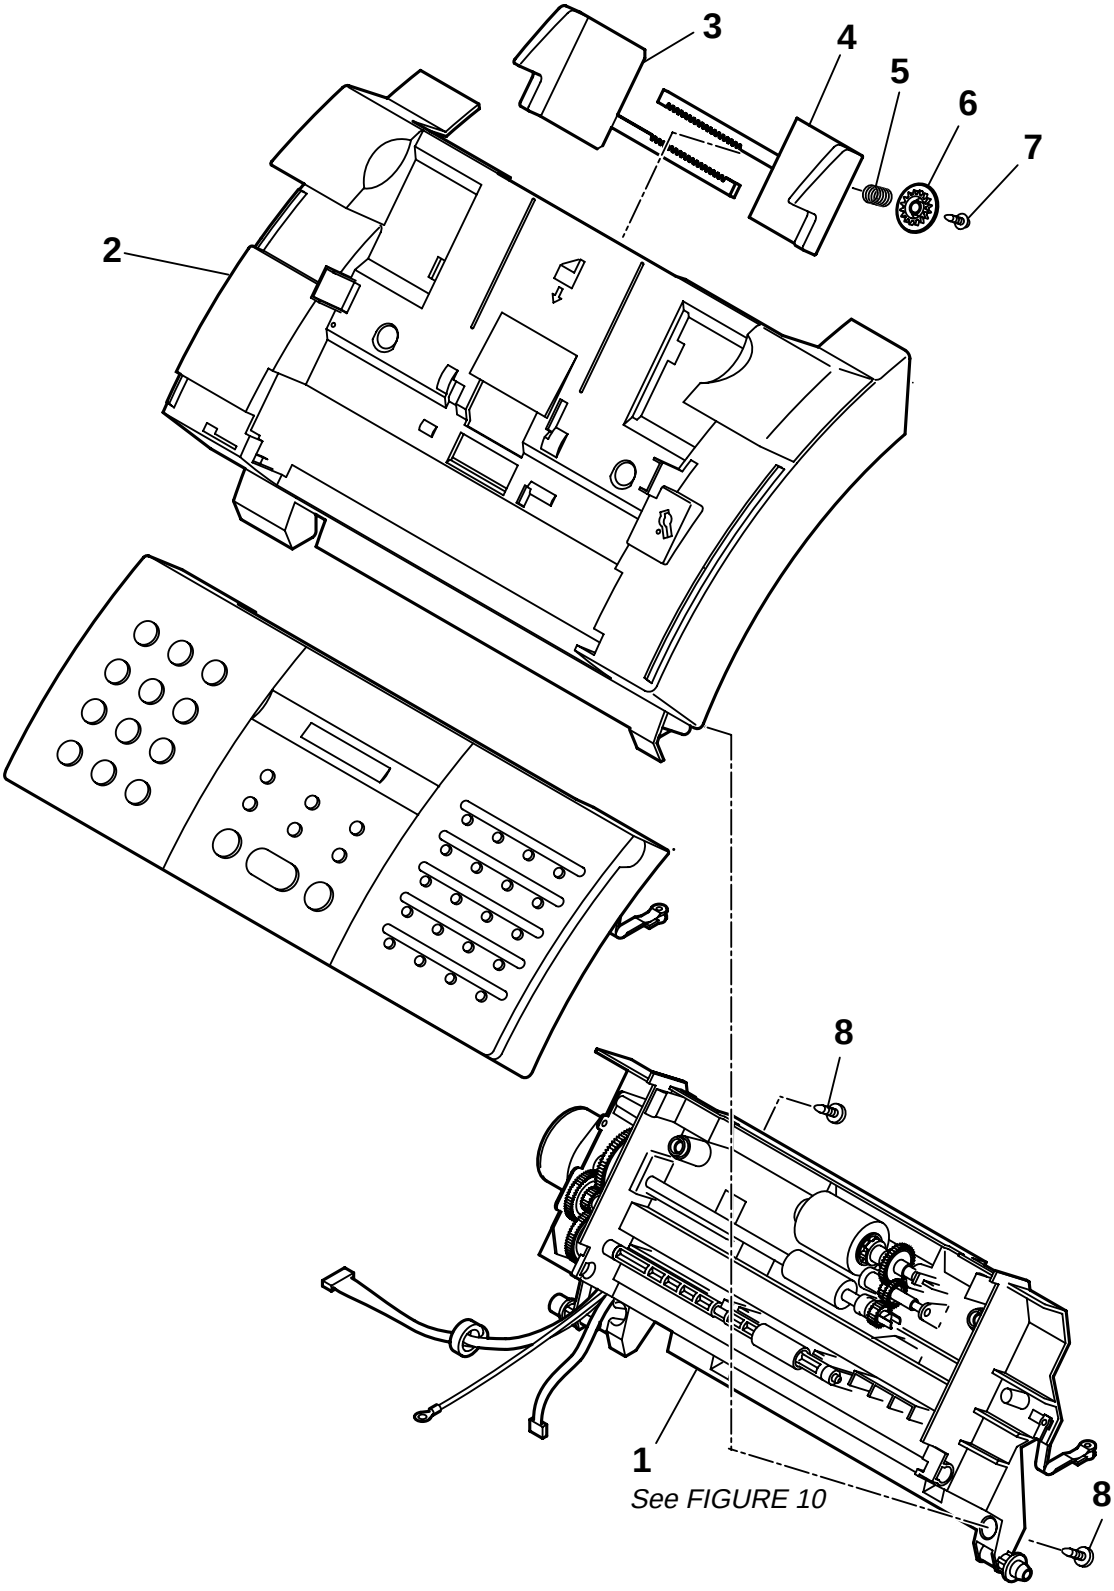

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
7 - 1	NPN		1	ADF UNIT	
2	HB1-4831-000		1	COVER, CARTRIDGE	
3	HB1-4833-000		1	GUIDE, DOCUMENT FEED, LEFT	
4	HB1-4834-000		1	GUIDE, DOCUMENT FEED, RIGHT	
5	HS5-2141-020		1	SPRING, SLIDER	
6	HS5-0254-000		1	GEAR, Z16	
7	XA9-0476-000		1	SCREW, TP M3X8	
8	XB4-7401-007		2	SCREW, PAN HEAD SELF-TAPPING	

FIGURE 8 OPERATION PANEL ASS'Y & ADF UPPER

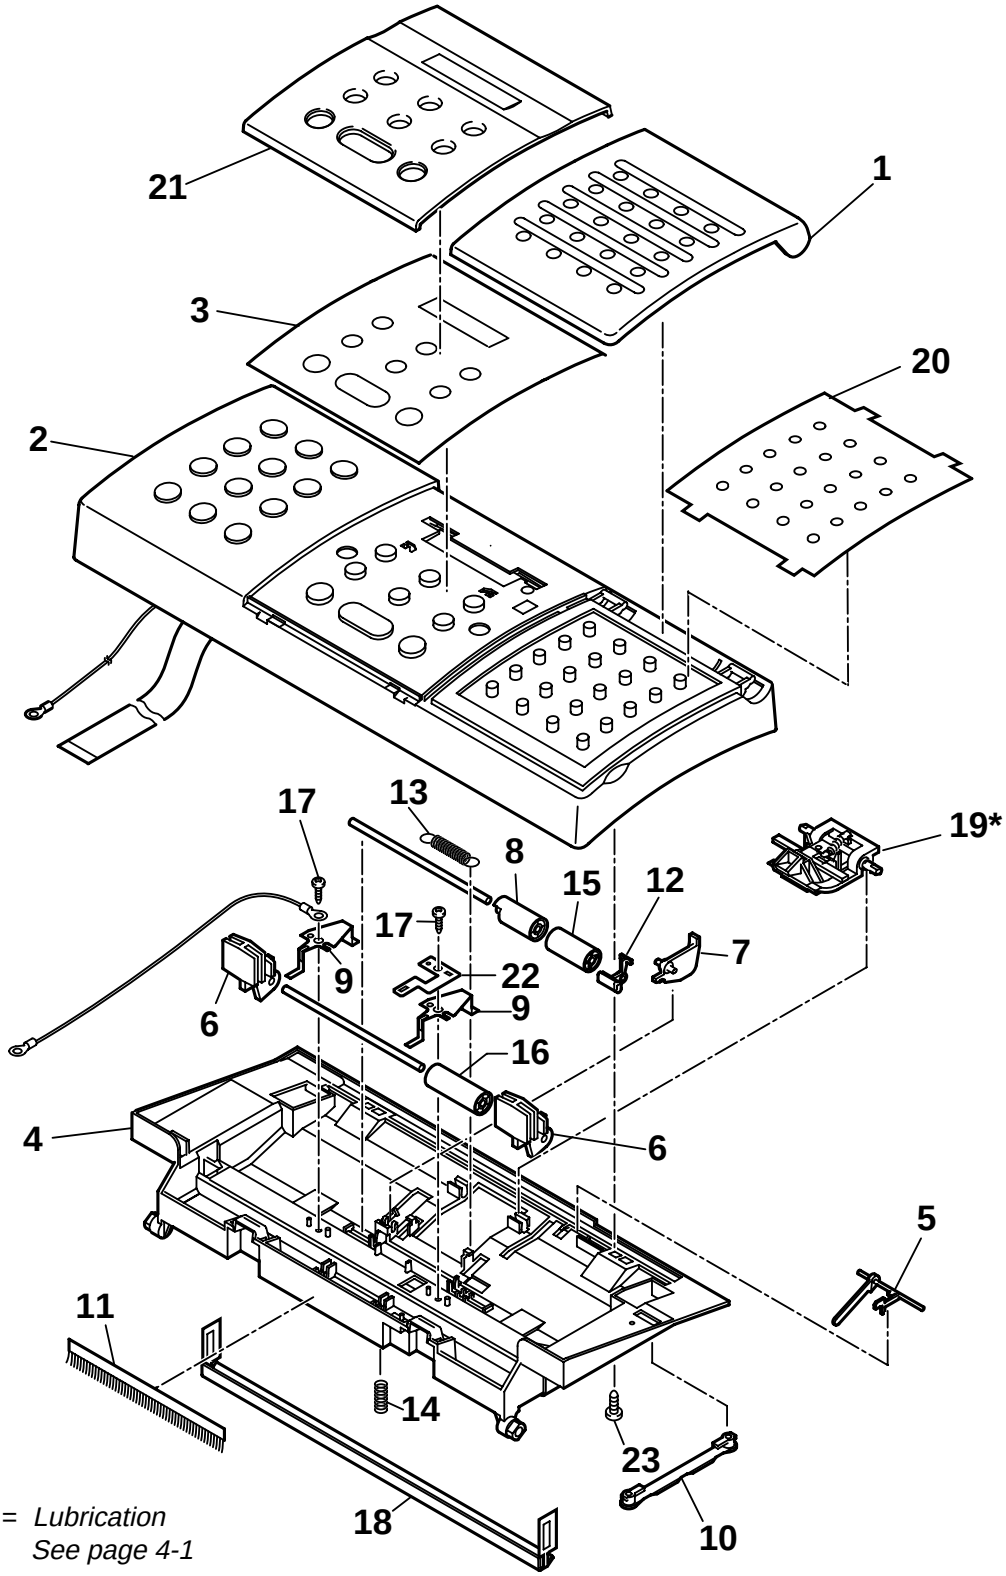

* = *Lubrication*
See page 4-1

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
8 - 1	HB1-4848-000		1	COVER, ONE TOUCH DIAL	
2	HG5-2557-000		1	OPERATION PANEL ASS'Y	
3	HB1-4852-000		1	SHEET, OPERATION PANEL	UK
	HB1-4859-000		1	SHEET, OPERATION PANEL	GER
	HB1-4861-000		1	SHEET, OPERATION PANEL	FRN
4	HB1-4838-000	N	1	FRAME, ADF UPPER	
5	HB1-4839-000		1	ARM, DETECTION (DS)	
6	HB1-4840-000		2	GUIDE, DOCUMENT EJECT	
7	HB1-2863-000		1	STOPPER, DOCUMENT	
8	HB1-2864-000		1	ROLLER, BACK UP	
9	HB1-2866-000		2	PLATE, PRESSURE	
10	HB1-3257-000		1	STOPPER, OPERATION PANEL	
11	HB1-4072-000		1	BRUSH, STATIC DISCHARGE	
12	HB1-4310-000		1	ARM, DETECTION (DES)	
13	HS5-2078-000		1	SPRING	
14	HS5-2129-000		1	SPRING, WHITE SHEET	
15	HS5-6023-030		1	ROLLER, BACK UP	
16	HS5-6069-000		1	ROLLER, DELIVERY	
17	XB4-7300-807		2	SCREW, TAP TIGHT, BINDING HEAD	
18	HF5-0399-000		1	WHITE SHEET UNIT	
19	HG5-2556-000		1	SEPARATION GUIDE ASS'Y	
20	HB1-4853-000		1	SHEET, ONE TOUCH DIAL	UK
	HB1-4860-000		1	SHEET, ONE TOUCH DIAL	GER
	HB1-4862-000		1	SHEET, ONE TOUCH DIAL	FRN
21	HB1-4822-000		1	COVER, OPERATION	FAX-L280/UK GER FRN
	HB1-4855-000		1	COVER, OPERATION	FAX-L200/UK GER FRN
22	HB1-5058-000		1	PLATE, GROUNDING	
23	XB4-7301-009		2	SCREW, BINDING HEAD SELF-TPG	

FIGURE 9 OPERATION PANEL ASS'Y

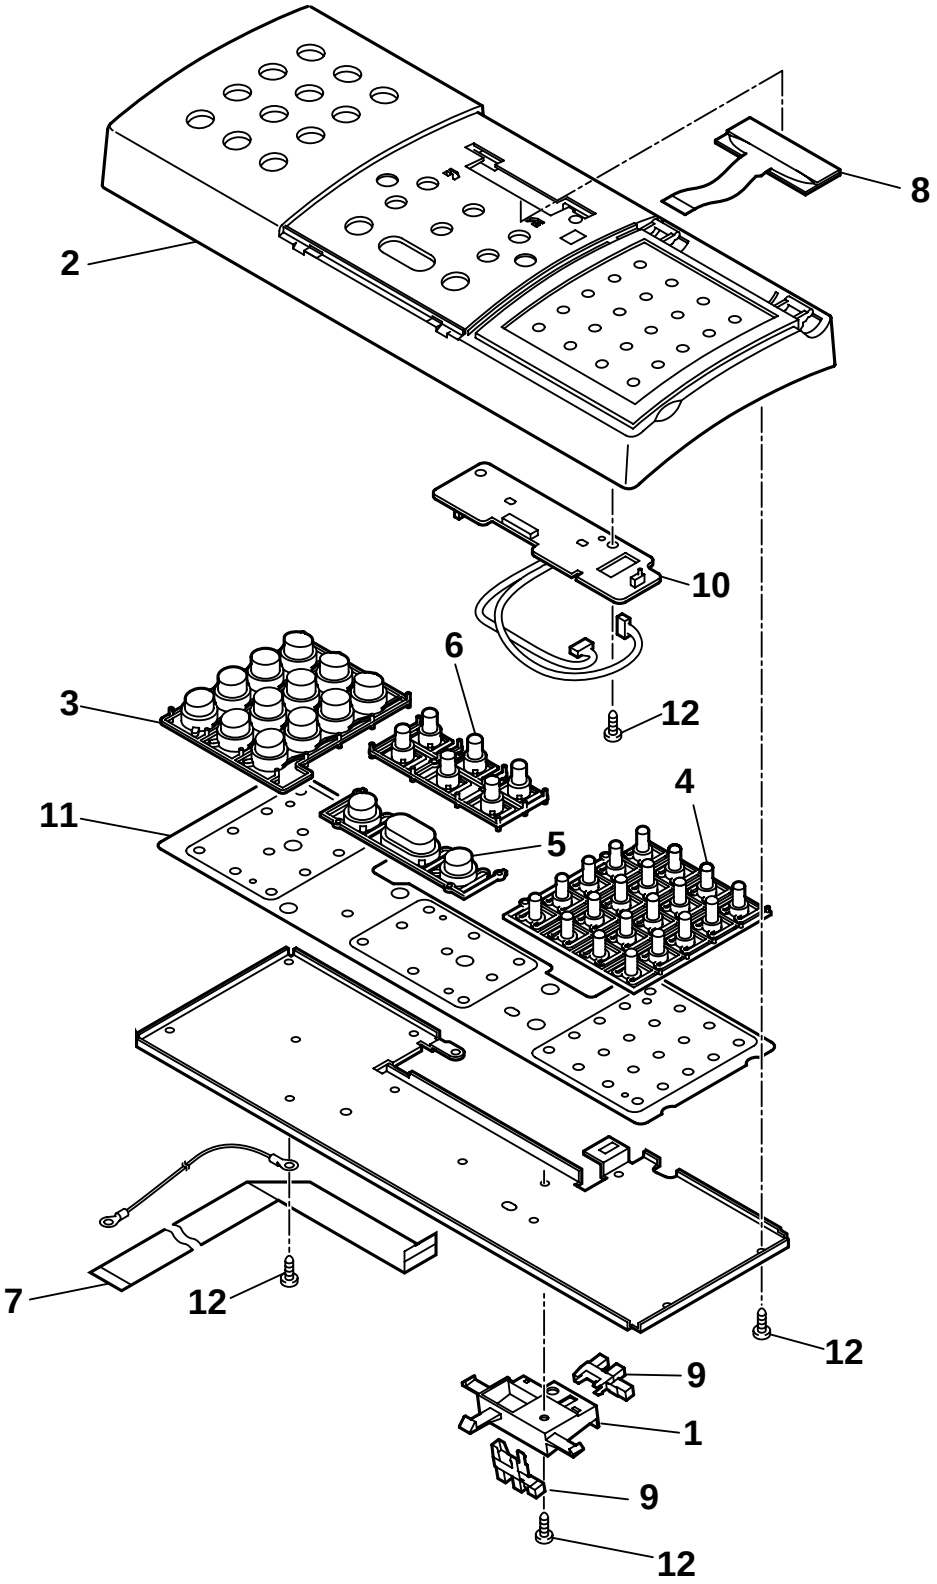

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
9 - 1	HB1-4837-000		1	HOLDER, SENSOR	
2	HB1-4842-000		1	COVER, OPERATION PANEL	
3	HB1-4843-000		1	KEY TOP, DIAL	
4	HB1-4844-000		1	KEY TOP, ONE TOUCH DIAL	
5	HB1-4845-000		1	KEY TOP, MAIN	
6	HB1-4846-000		1	KEY TOP, FUNCTION	
7	HH2-3055-000		1	CABLE, FLAT, 20P	
8	HH7-2521-000		1	LCD UNIT	
9	WG8-5362-000		2	PHOTO-INTERRUPTER, TLP1241	
10	HG5-2564-000		1	OPCNT BOARD ASS'Y	
11	HH7-2529-000		1	MEMBRANE UNIT	
12	XB4-7301-009		14	SCREW, BINDING HEAD SELF-TPG	

FIGURE 10 ADF LOWER

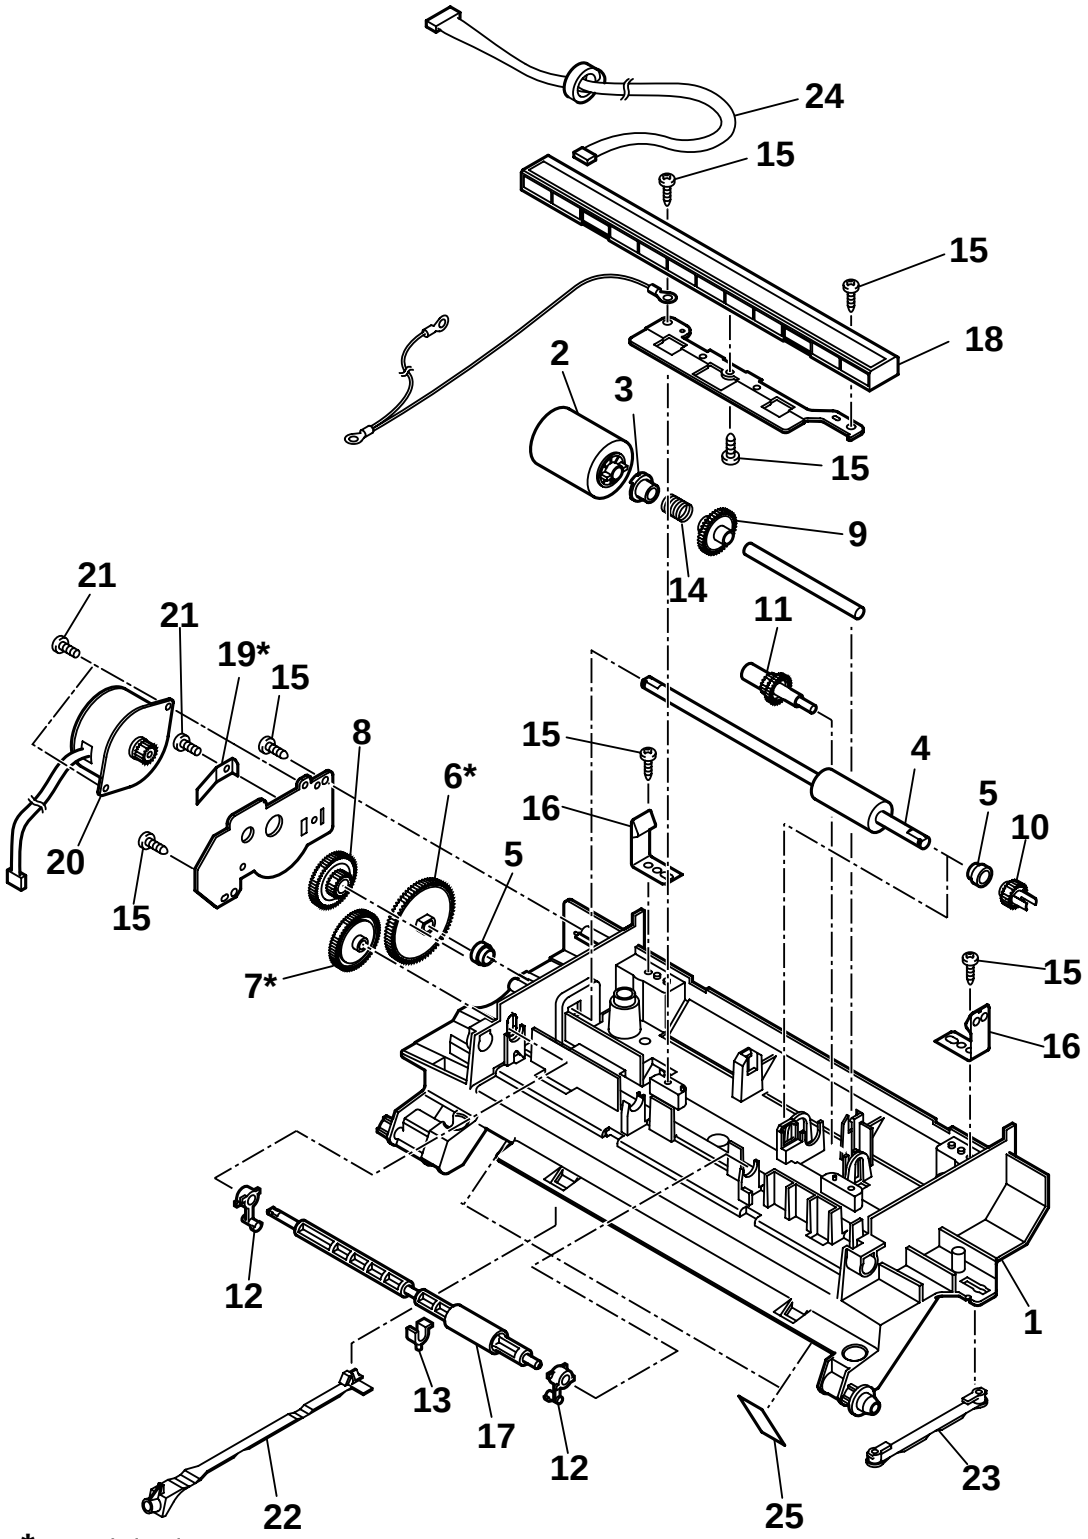

* = *Lubrication*
See page 4-2

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
10 - 1	HB1-4850-000	N	1	FRAME, ADF LOWER	
2	HB1-4856-000		1	ROLLER, SEPARATION	
3	HB1-1779-000		1	SPACER	
4	HB1-4307-000		1	ROLLER, DOCUMENT FEED	
5	HS1-1063-000		2	BUSHING	
6	HS5-0311-000		1	GEAR, Z82D	
7	HS5-0312-000		1	GEAR, Z59D	
8	HS5-0313-000		1	GEAR, Z21/Z54	
9	HS5-0314-000		1	GEAR, Z40D	
10	HS5-0315-000		1	GEAR, Z21D	
11	HS5-0316-000		1	GEAR, Z21/28B	
12	HS5-1070-030		2	BUSHING	
13	HS5-1090-000		1	BUSHING	
14	HS5-2077-000		1	SPRING, CLUTCH	
15	XB4-7300-807		7	SCREW, TAP TIGHT, BINDING HEAD	
16	HF5-0375-000		2	LOCK, OPERATION PANEL	
17	HF5-0543-000		1	ROLLER, DOCUMENT EJECT	
18	HH7-2520-000		1	CONTACT SENSOR UNIT	
19	HB1-3036-000		1	PLATE, GROUNDING	
20	HH7-2522-000		1	MOTOR, DOCUMENT FEED	
21	XB1-2300-407		3	SCREW, BH3X4 (S)	
22	HB1-3109-020		1	STOPPER, CRG	
23	HB1-3257-000		1	STOPPER, OPERATION PANEL	
24	HG5-2583-000		1	CABLE WITH CONNECTOR, 7P	
25	HB1-4261-000		2	SHEET	

FIGURE 11 SCANNER ASS'Y

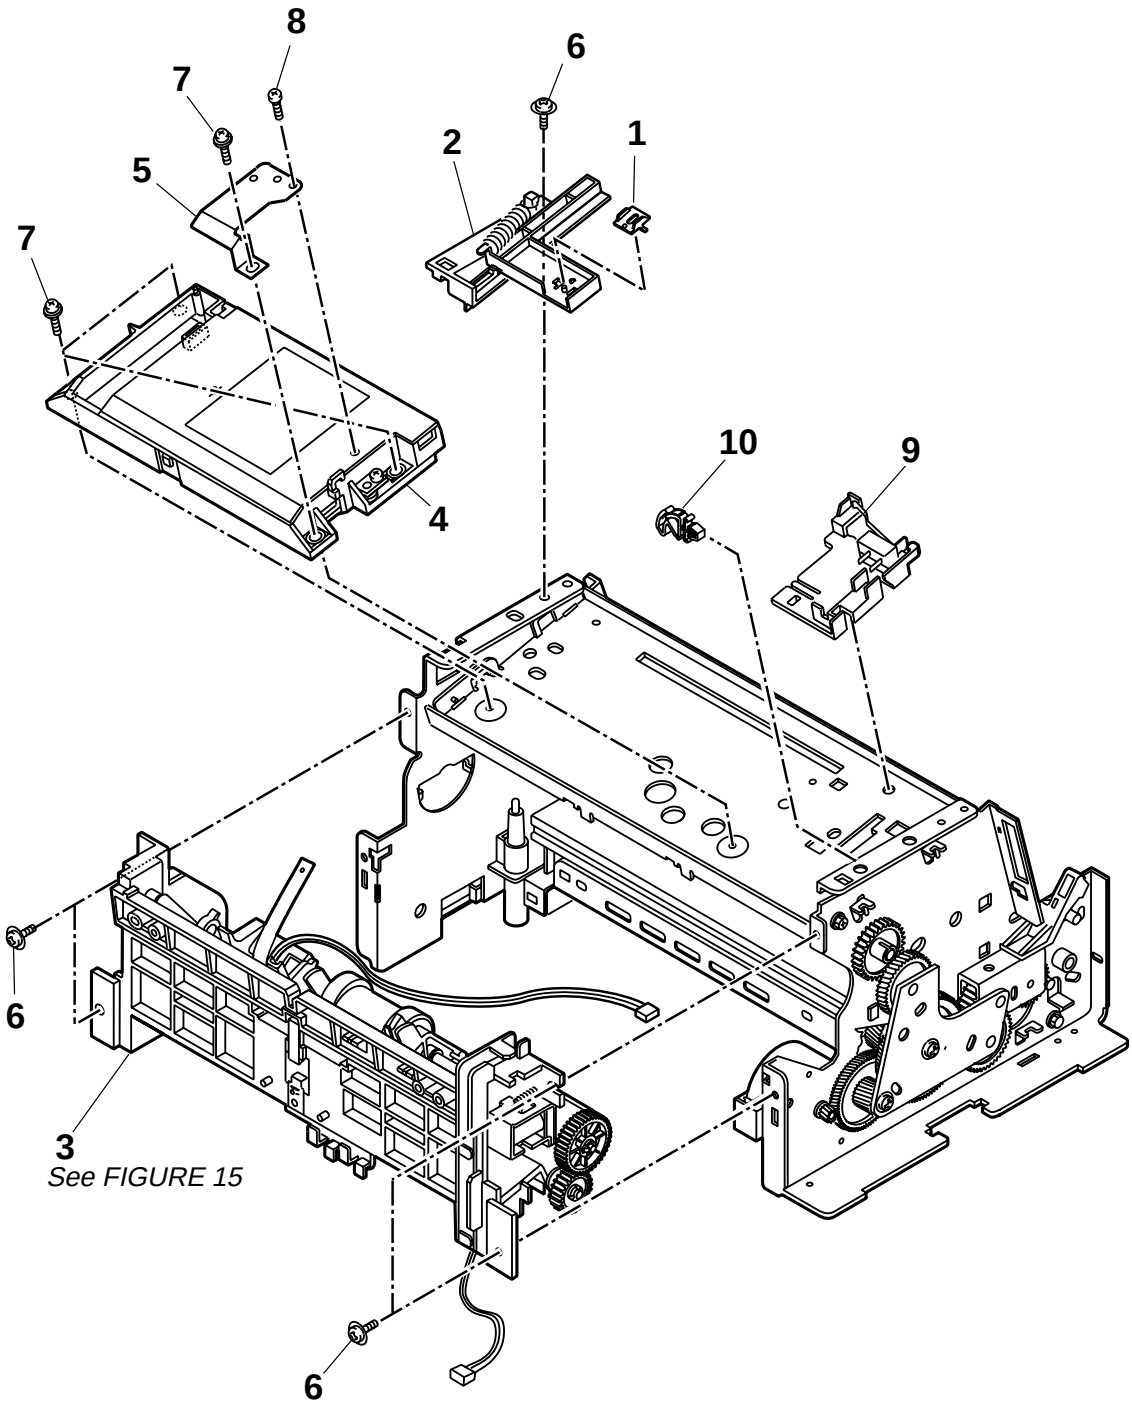

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
11 - 1	HB1-3018-000		1	STOPPER, TAPE	
2	HG5-1290-000		1	ACTUATOR UNIT	
3	NPN		1	PAPER FEED UNIT	
4	RG5-5473-000		1	SCANNER ASS'Y	
5	HB1-3418-000		1	PLATE, GROUNDING	
6	XB3-6300-800		5	SCREW, RS, M3X8	
7	XA9-1261-000		4	SCREW, TP, M3X8	
8	XB4-7300-807		1	SCREW, TAP TIGHT, BINDING HEAD	
9	RF5-3256-000		1	MOUNT, SENSING LEVER	
10	WT2-5134-000		1	CLAMP, CABLE	

FIGURE 12 FIXING SECTION 1

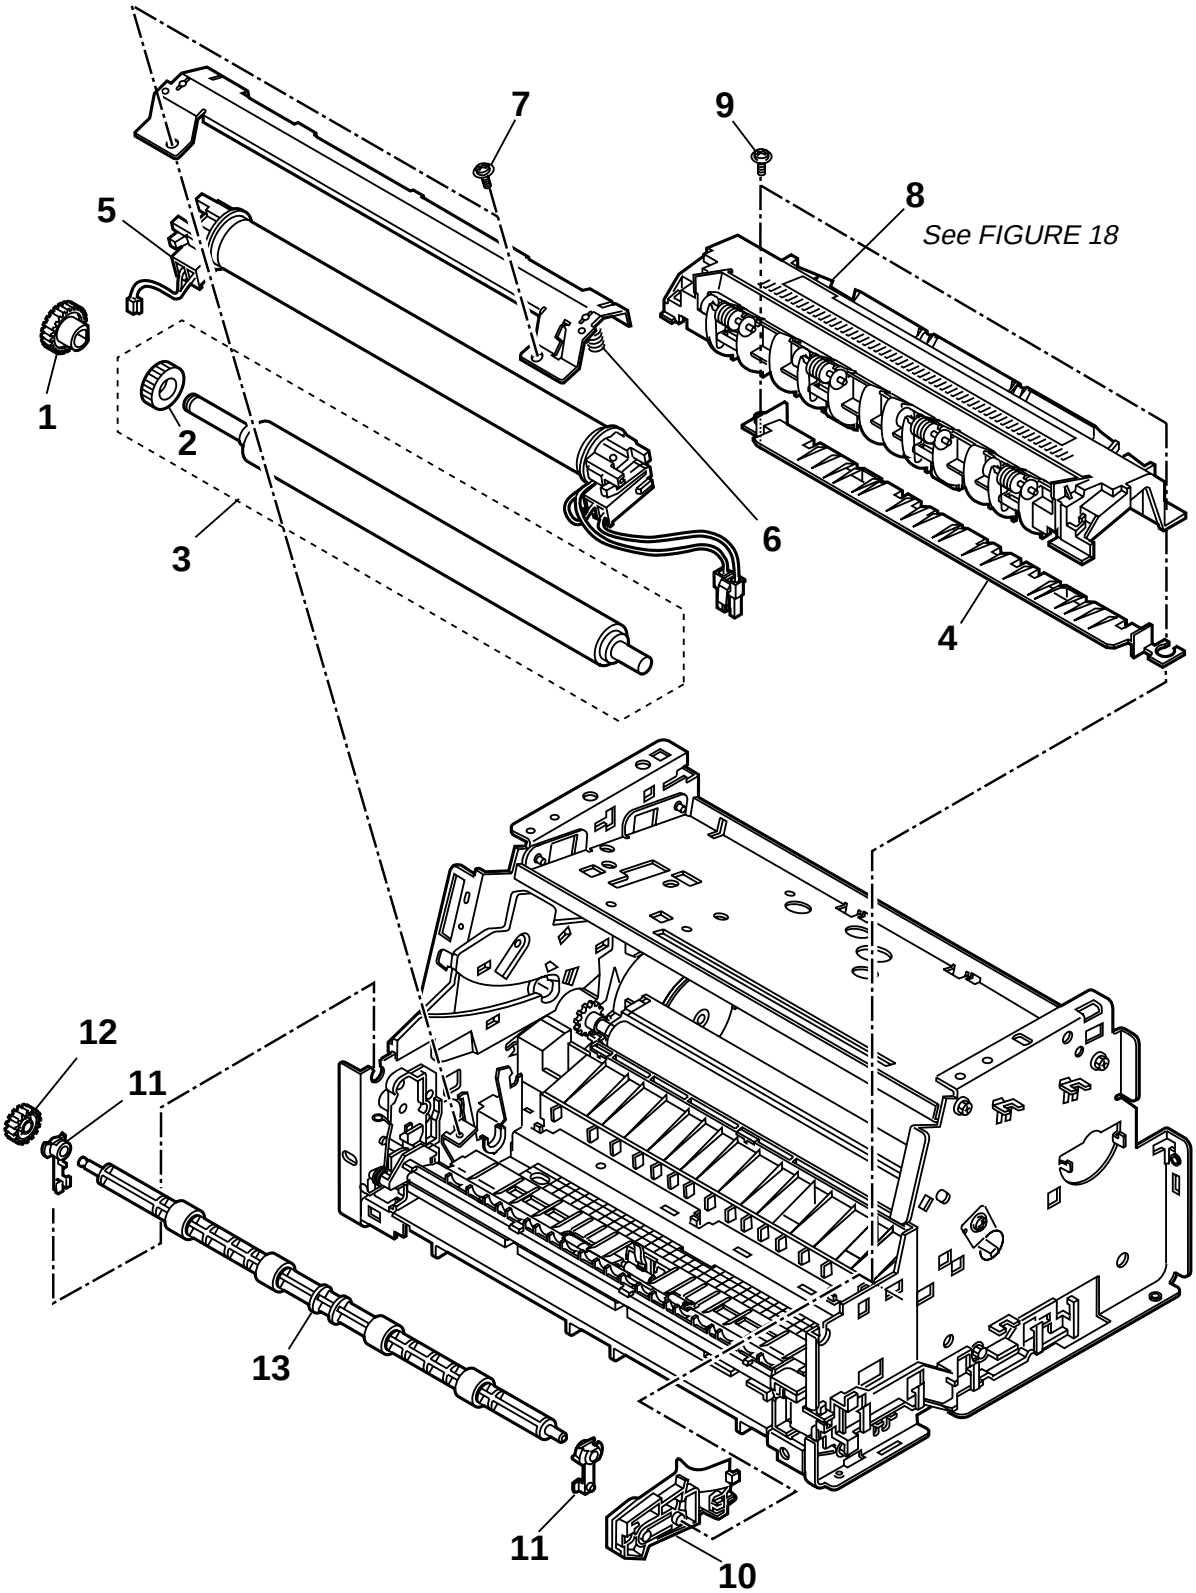

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
12 - 1	RS5-0796-000		1	GEAR, 27T	
2	RB2-1668-000		1	RUBBER, CONTINUITY	
3	RF5-5479-000		1	ROLLER, PRESSURE	
4	RB1-7247-000		1	GUIDE, PAPER	
5	HG5-2408-000		1	FIXING ASS'Y	
6	RS5-2508-000		2	SPRING, COMPRESSION	
7	XB6-7300-807		2	SCREW, TP, M3X8	
8	RG5-5482-000		1	DELIVERY ASS'Y	
9	XB3-6300-800		2	SCREW, RS, M3X8	
10	RB1-7341-030		1	GUIDE, SUB, CARTRIDGE, RIGHT	
11	RB1-7288-020		2	BUSHING	
12	RS5-0797-000		1	GEAR, 18T	
13	RF5-2367-000		1	ROLLER, FEEDER	

FIGURE 13 DRIVE GEARS

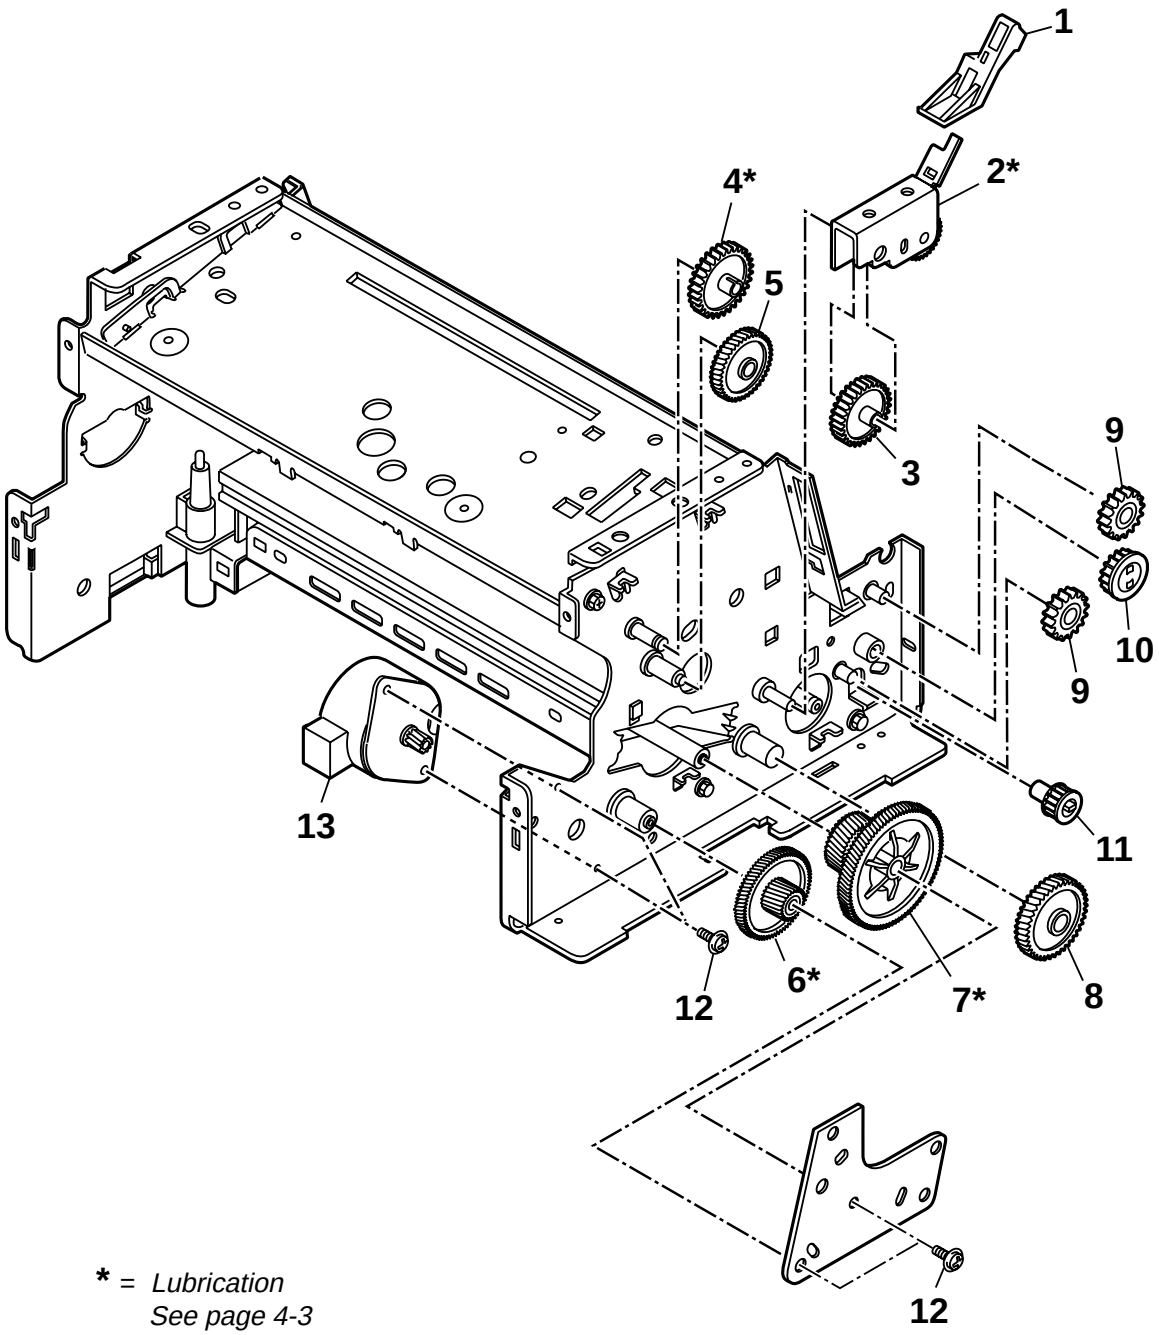

***** = *Lubrication*
See page 4-3

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
13 - 1	RB1-8170-000		1	LEVER, RELEASE, D	
2	RF5-1513-000		2	ARM, SWING	
3	RS5-0791-000		1	GEAR, 36T	
4	RS5-0789-000		1	GEAR, 37T	
5	RS5-0799-000		1	GEAR, 51T/17T	
6	RS6-0380-000		1	GEAR, 23T/98T	
7	RS5-0788-000		1	GEAR, 32T/93T	
8	RS5-0790-000		1	GEAR, 54T/19T	
9	RS5-0793-000		2	GEAR, 22T	
10	RS5-0794-000		1	GEAR, 24T	
11	RS5-0798-000		1	GEAR, 15T	
12	XA9-1263-000		4	SCREW, TP, M3X5	
13	RH7-1450-000		1	MOTOR, STEPPING, DC 4.8W	

FIGURE 14 FIXING SECTION 2

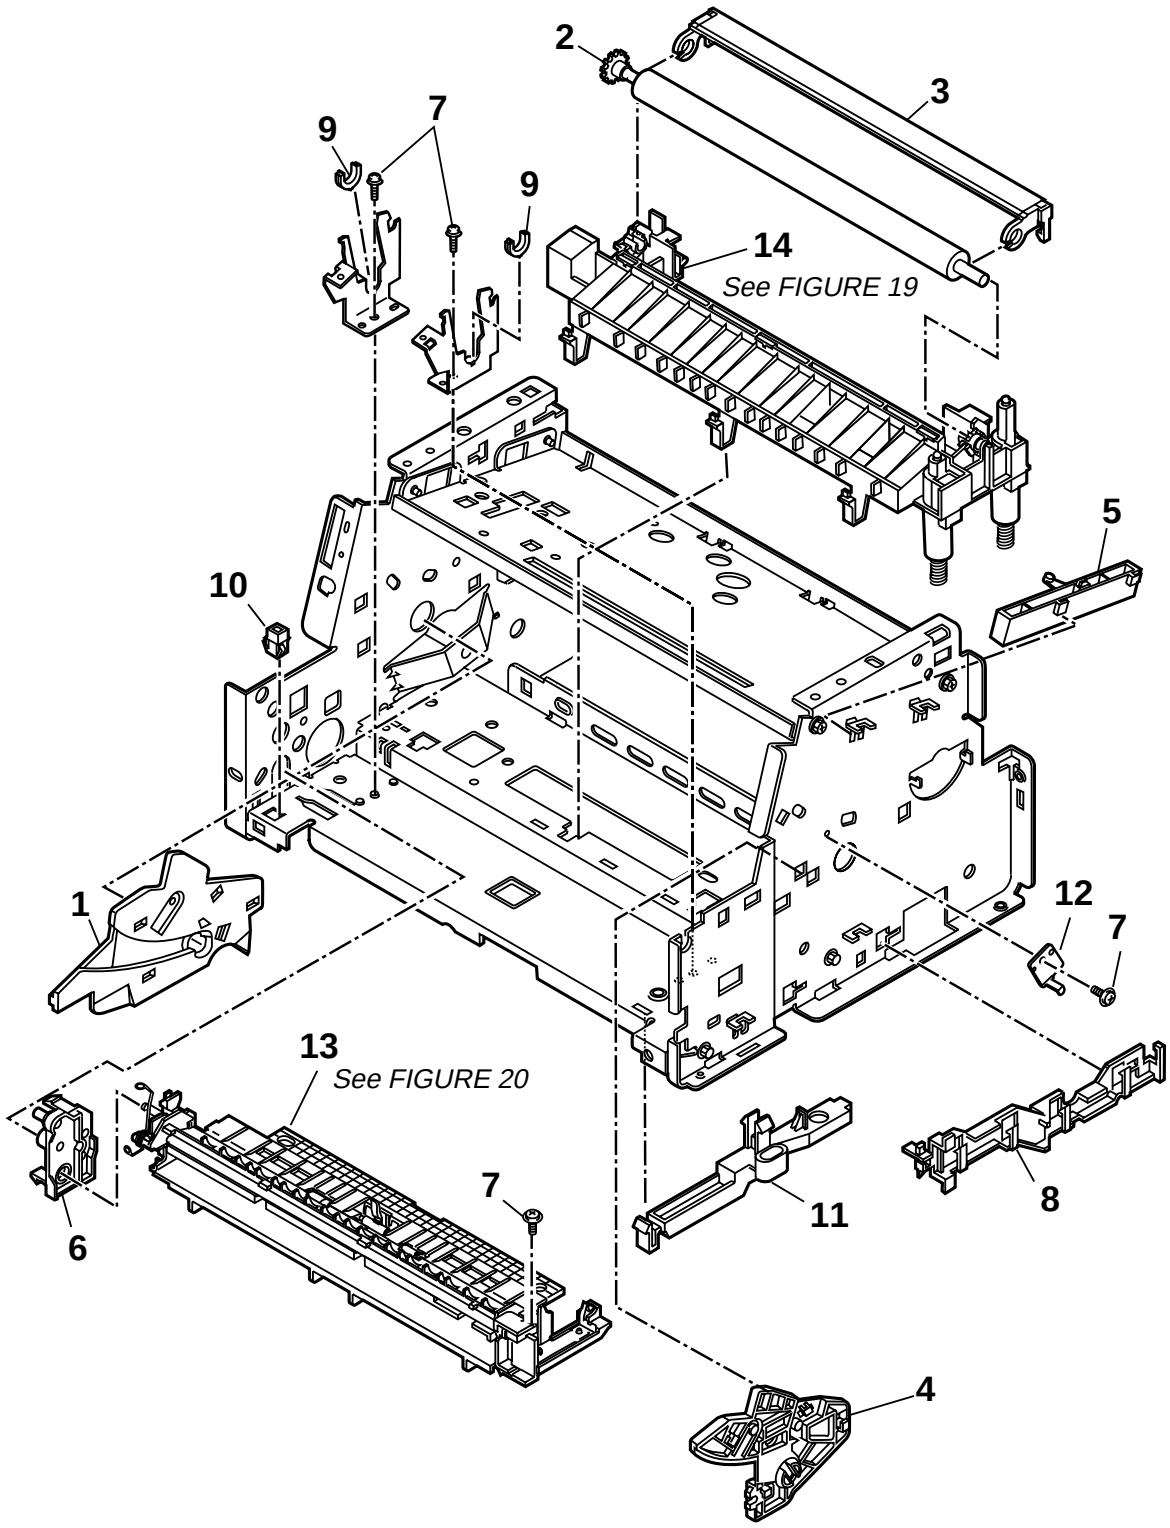

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
14 - 1	RF5-1514-020		1	GUIDE, CARTRIDGE,LEFT	
2	RF5-1534-000		1	ROLLER, TRANSFER	
3	RF5-2358-000		1	GUIDE, TRANSFER	
4	RF5-1515-020		1	GUIDE, CARTRIDGE	
5	HB1-3019-000		1	STOPPER, CARTRIDGE	
6	RB1-7107-000		1	HOLDER, GEAR	
7	XA9-0724-000		4	SCREW, M3X8	
8	RB1-7130-020		1	GUIDE, CABLE	
9	RB1-7246-000		2	BUSHING	
10	VS1-5057-002		1	CONNECTOR, 2P	
11	RF5-1533-000		1	PLATE, CONTINUITY	
12	RB1-7129-000		1	SPRING, GROUNDING	
13	RG5-3475-040		1	SEPARATION GUIDE ASS'Y	
14	RG5-5481-000		1	TRANSFER BLOCK ASS'Y	

FIGURE 15 PAPER FEED SECTION

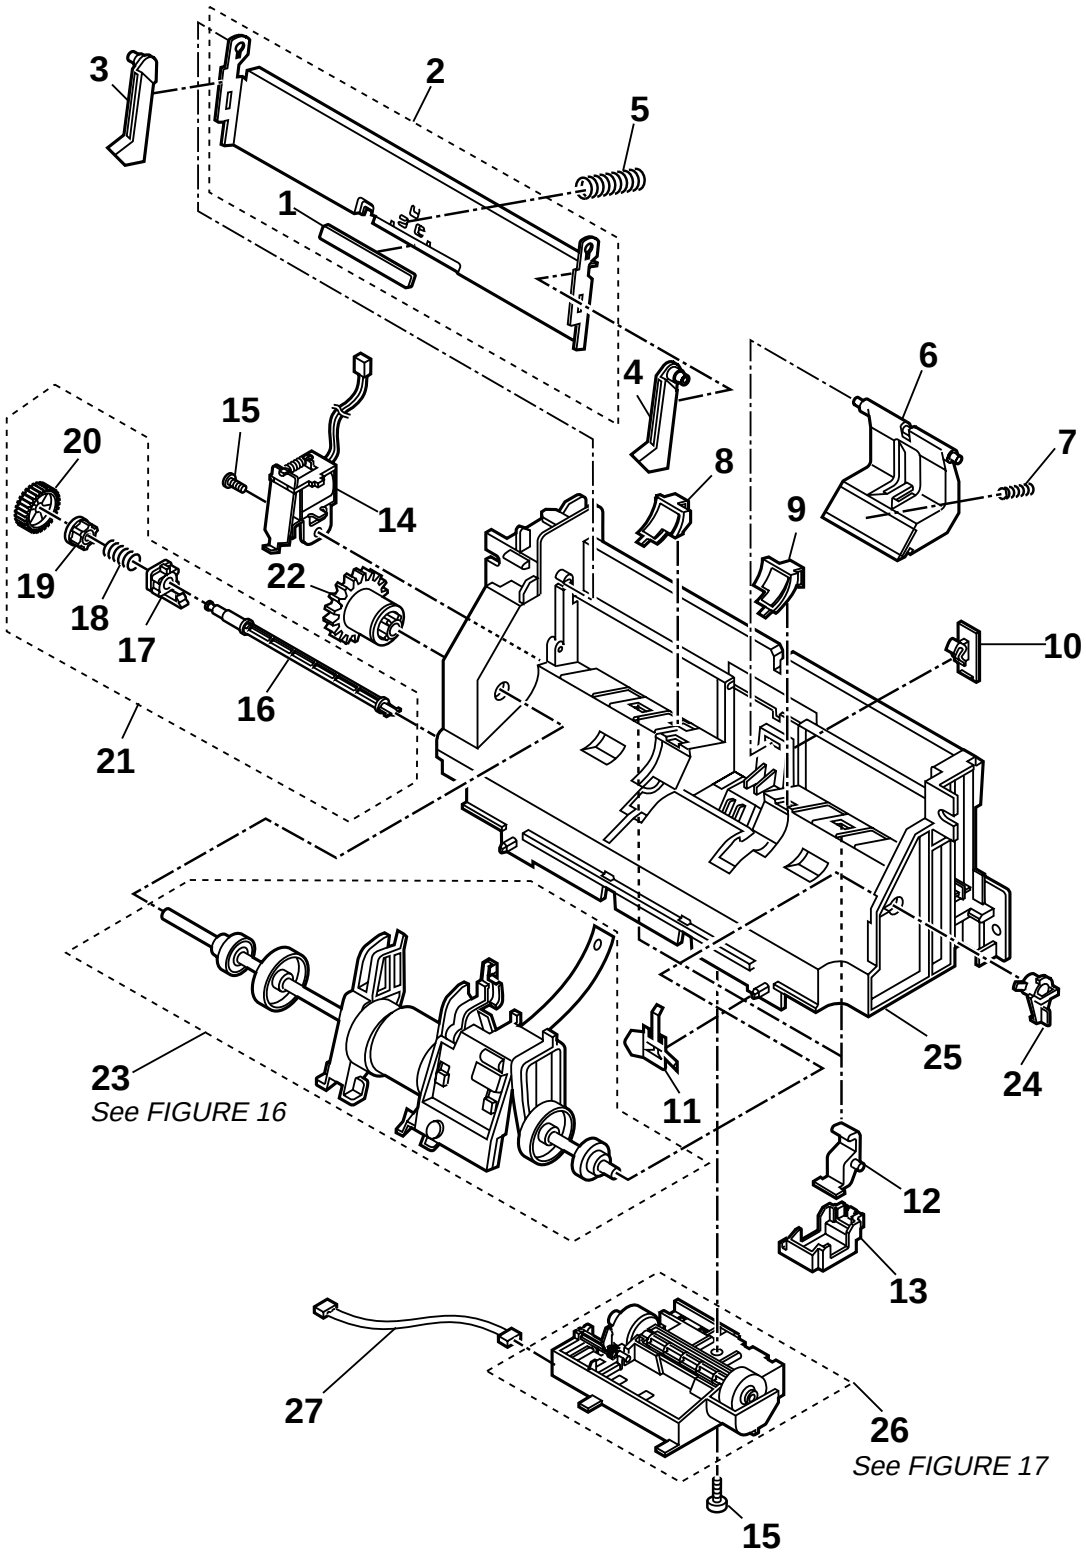

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
15 - 1	RB2-1706-000		1	SHEET, SEPARATION	
2	RF5-2372-000		1	PLATE, MIDDLE	
3	RB1-7185-000		1	ARM, PLATE, LEFT	
4	RB1-7186-000		1	ARM, PLATE, RIGHT	
5	RS5-2501-000		1	SPRING, COMPRESSION	
6	RB2-6221-000		1	ARM, SEPARATION	
7	RS5-2502-000		1	SPRING, COMPRESSION	
8	RF5-1492-000		1	PAD, LEFT	
9	RF5-1493-000		1	PAD, RIGHT	
10	RB1-7206-000		1	HOLDER, ARM	
11	RB1-7172-000		1	SPRING, GROUNDING	
12	RB1-7219-000		2	STOPPER	
13	HB1-4825-000		2	HOLDER, STOPPER	
14	RH7-5265-000		1	SOLENOID	
15	XA9-1262-000		2	SCREW, M4X10	
16	RB1-7221-000		1	SHAFT, DRIVE	
17	RB1-7222-000		1	BUSHING	
18	RS5-2510-000		1	SPRING, COMPRESSION	
19	RB1-7224-000		1	RATCHET	
20	RS5-0786-000		1	GEAR, 24T	
21	RG5-1947-000		1	FEEDER DRIVE ASS'Y	
22	RB1-7197-020		1	CLUTCH	
23	HG5-2546-000		1	PICKUP ROLLER ASS'Y	
24	RB1-7184-000		1	BUSHING	
25	RB1-7177-000	N	1	FRAME, PAPER FEED	
26	HG5-2548-000		1	FEEDER ASS'Y	
27	HG5-2568-000		1	CABLE WITH CONNECTOR, 3P	

FIGURE 16 PICK-UP ROLLER ASS'Y

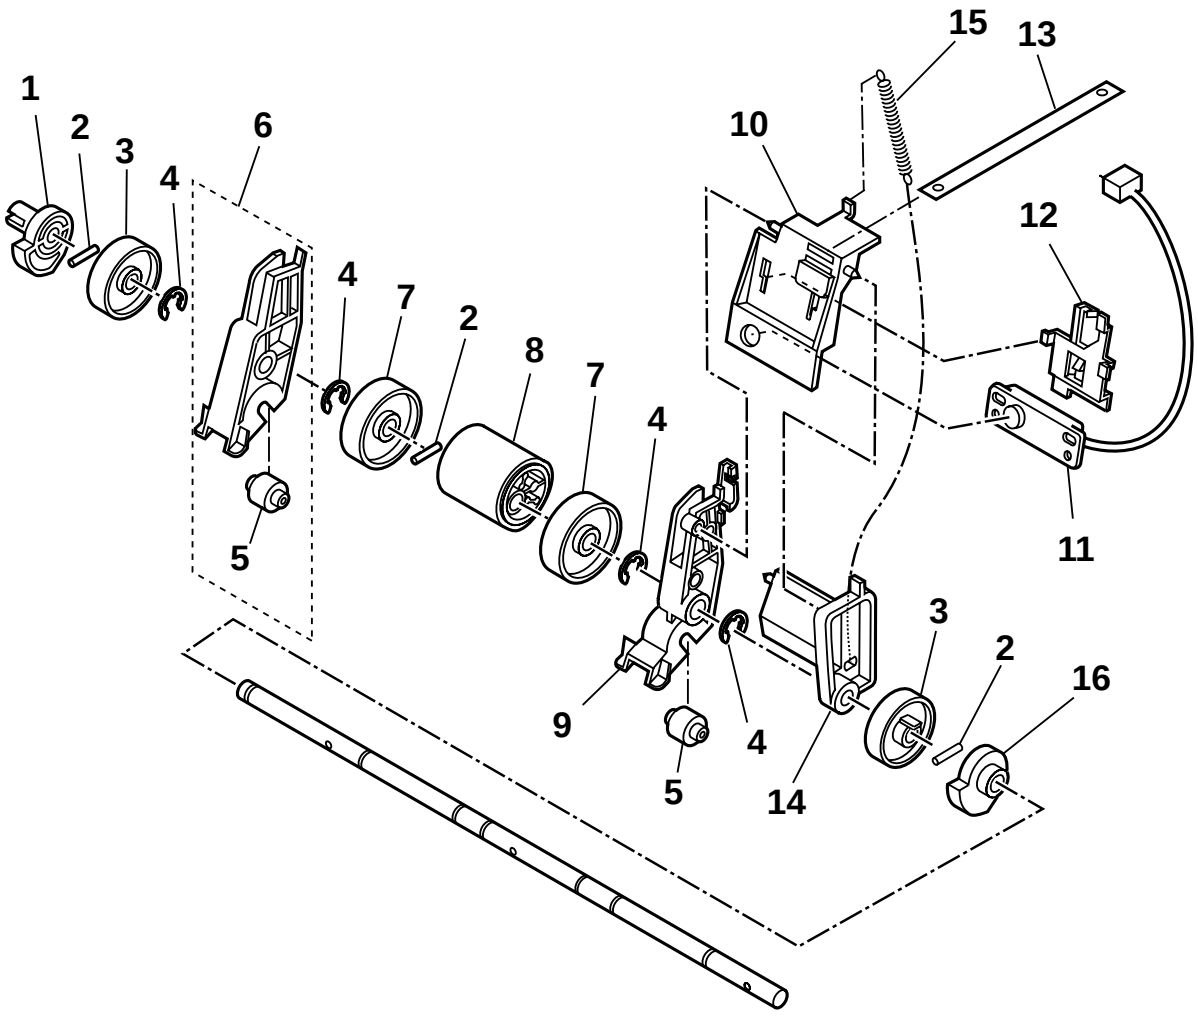

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
16 - 1	RB1-7193-000		1	CAM, LEFT	
2	XD9-0159-000		3	PIN, DOWEL	
3	RB2-1703-000		2	ROLLER, SUB	
4	XD9-0131-000		4	RING,E	
5	RB2-1701-000		2	ROLLER, FEED	
6	RG5-3492-000		1	FEED ROLLER ASS'Y, LEFT	
7	RB2-1633-000		2	ROLLER, SUB	
8	RB2-6223-000		1	ROLLER, PAPER PICK-UP	
9	HB1-3013-000		1	HOLDER, ROLLER	
10	HB1-3011-040		1	HOLDER, TONER SENSOR	
11	HH7-2423-000		1	TONER SENSOR ASS'Y	
12	HB1-3012-000		1	SUPPORTER, TONER SENSOR	
13	HB1-3015-000		1	BELT, TONER SENSOR	
14	HB1-3014-000		1	SUB HOLDER, ROLLER	
15	HS5-2139-000		1	SPRING, TONER SENSOR	
16	RB1-7194-000		1	CAM, RIGHT	

FIGURE 17 FEEDER ASS'Y

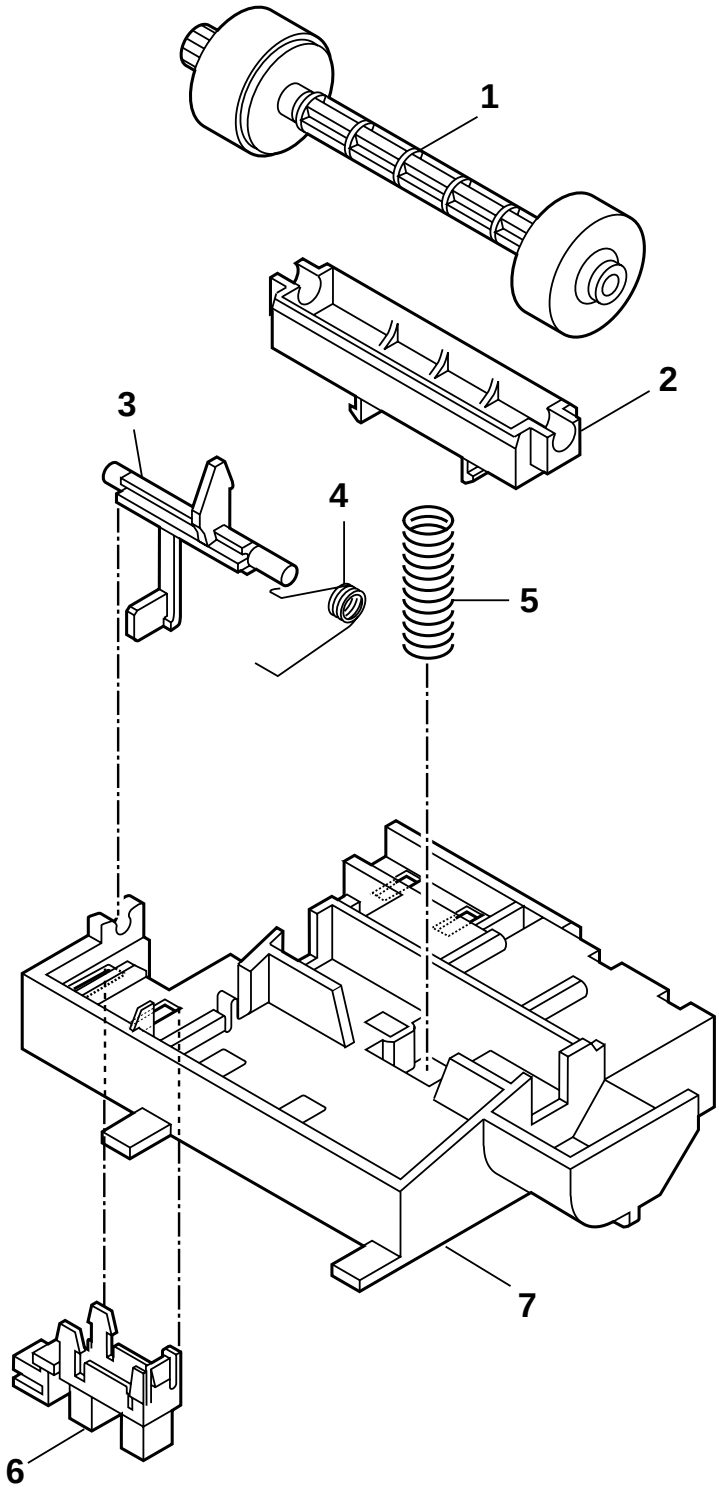

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
17 - 1	RB2-1699-000		1	ROLLER	
2	RB1-7203-000		1	ARM, PRESSURE	
3	RB2-1700-030		1	LEVER, REGISTRATION SENSOR	
4	RB1-7205-000		1	SPRING, TORSION	
5	RS5-2503-000		1	SPRING, COMPRESSION	
6	WG8-5362-000		1	PHOTO-INTERRUPTER, TLP1241	
7	RB1-7200-030		1	HOLDER	

FIGURE 18 DELIEVRY ASS'Y

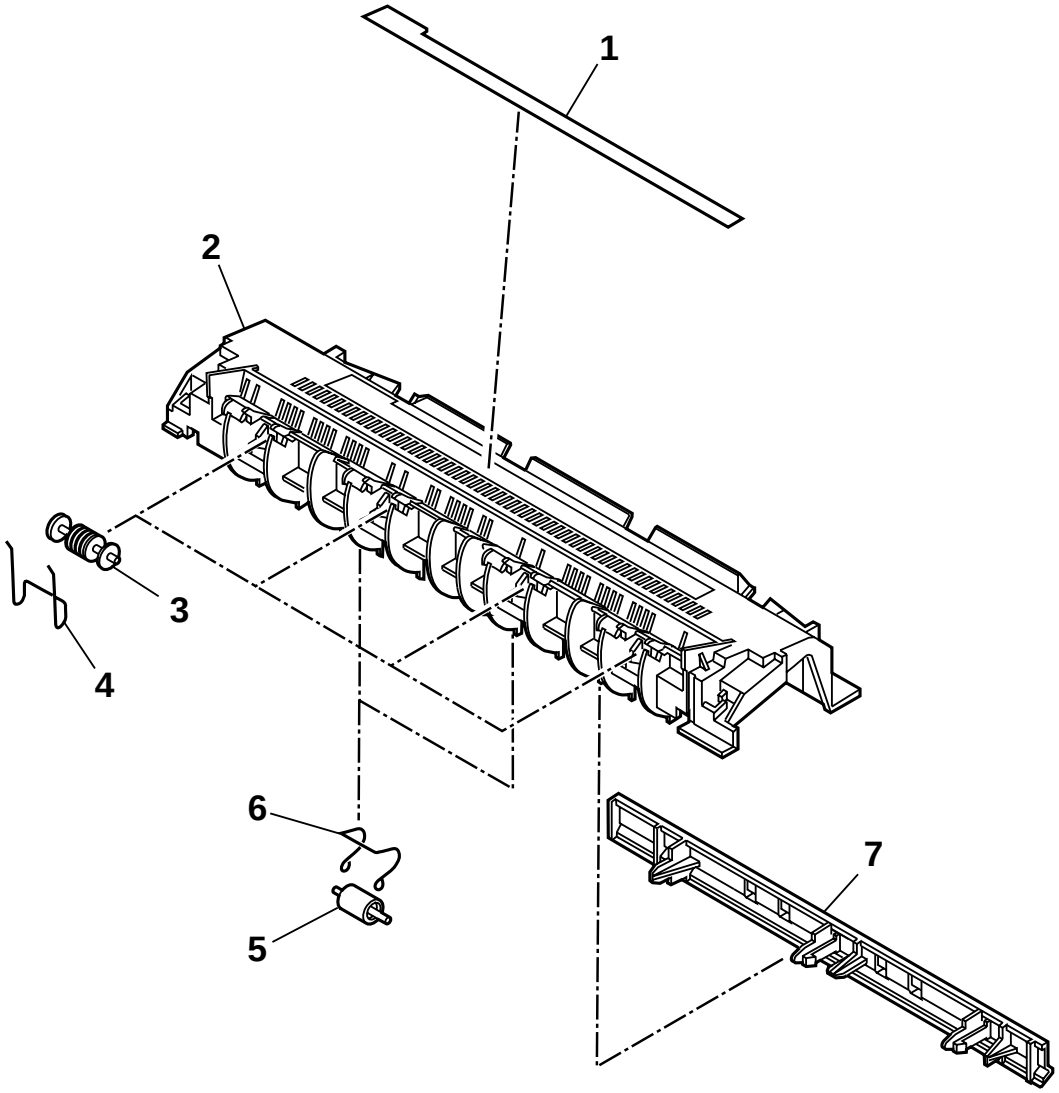

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
18 - 1	RS5-8543-020		1	LABEL, "WARNING HIGH TEMP"	
2	RB2-1686-000		1	FRAME	
3	RB1-7284-020		4	ROLLER, FACE DOWN	
4	RB1-7286-000		4	SPRING, WIRE	
5	RB2-1685-000		2	ROLLER, FACE UP	
6	RB1-7287-000		2	SPRING, WIRE	
7	RB1-7334-000		1	GUIDE, JAMMED PAPER REMOVAL	

FIGURE 19 TRANSFER BLOCK ASS'Y

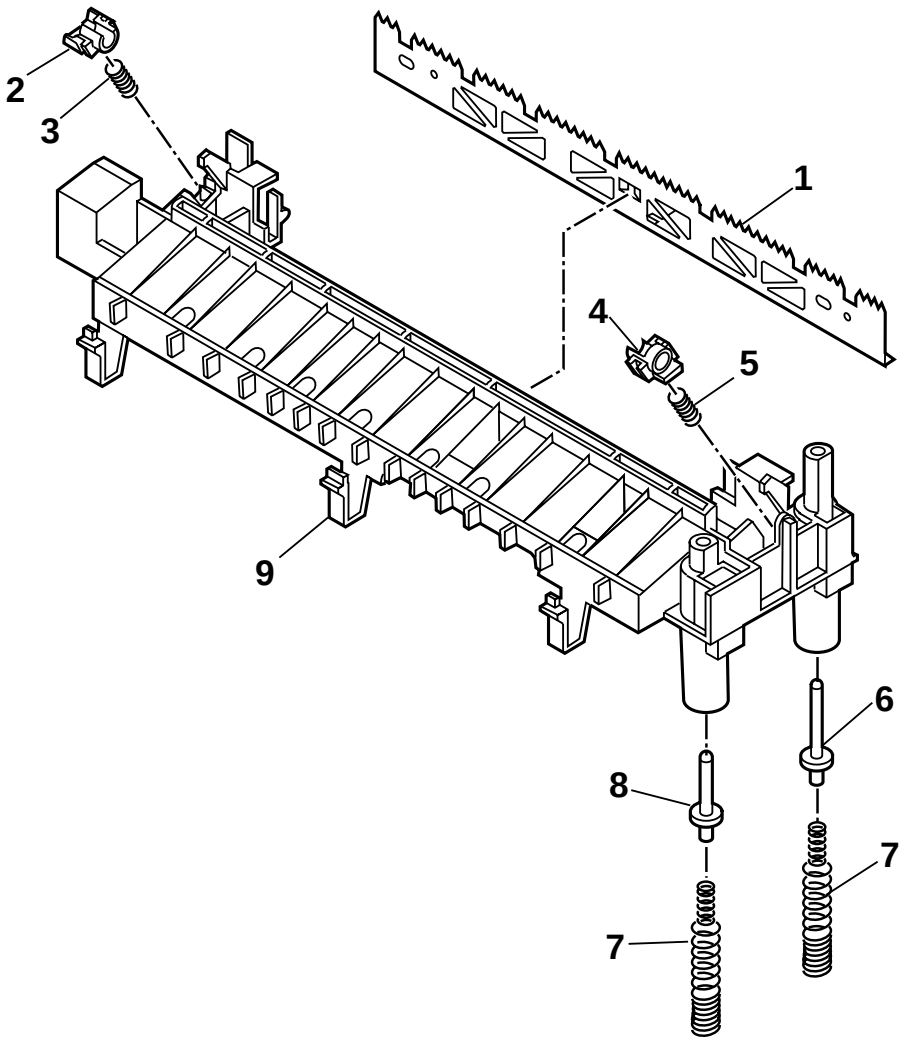

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
19 - 1	RB2-1657-000		1	ELIMINATOR, STATIC CHARGE	
2	RB2-1655-000		1	BUSHING	
3	RS5-2504-000		1	SPRING, COMPRESSION	
4	RB2-6214-000		1	BUSHING	
5	RS5-2505-000		1	SPRING, COMPRESSION	
6	RB1-7237-000		1	PIN, CONTACT	
7	RS5-2512-000		2	SPRING, COMPRESSION	
8	RB1-7236-000		1	PIN, CONTACT	
9	RB2-1654-000		1	BLOCK, TRANSFER	

FIGURE 20 SEPARATION GUIDE ASS'Y (RECORDING)

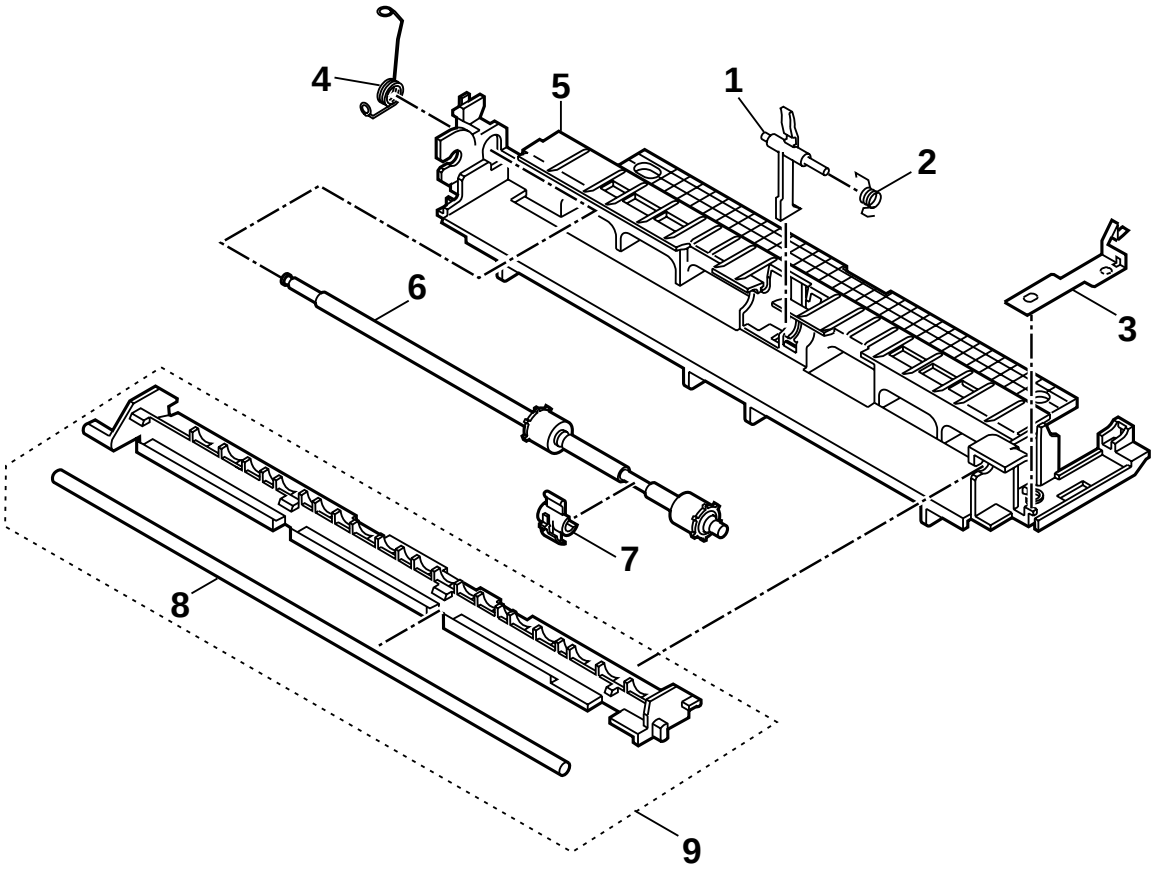

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
20 - 1	RB1-7293-030		1	LEVER, SENSOR	
2	RB1-7294-000		1	SPRING, TORSION	
3	RB2-1691-000		1	SPRING, LEAF	
4	RB1-7277-000		1	SPRING, TORSION	
5	RB2-1687-000		1	GUIDE, SEPARATION	
6	RF5-2368-000		1	ROLLER, FACE UP	
7	RB2-1690-000		1	BUSHING	
8	RB2-1689-000		1	ROD, REINFORCEMENT	
9	RG5-3476-030		1	FLAPPER	

FIGURE 21 SCNT BOARD ASS'Y (FAX-L200)

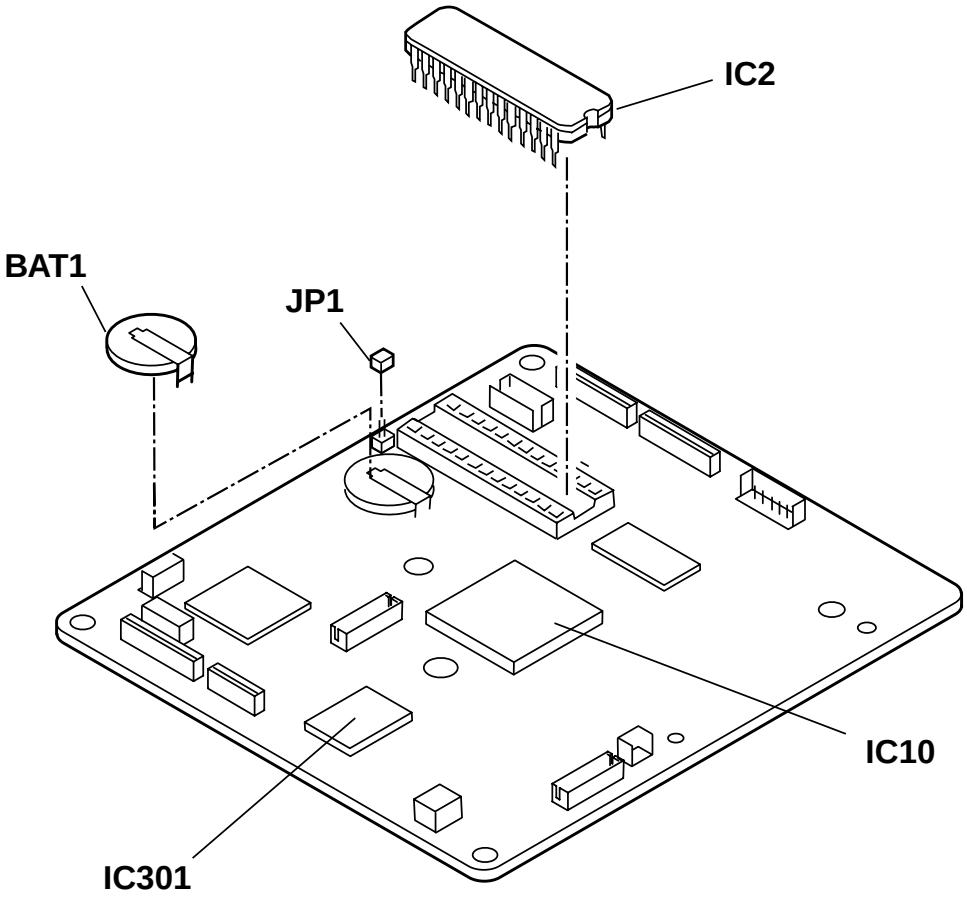

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
21 - BAT1	WK1-5130-000		1	BATTERY, LITHIUM, CR2032/1HS	
IC2	HH4-3450-000		1	IC, MR27V1652D-RA, OTP-ROM	
IC10	HH4-3236-000		1	IC, HG73C051FD, GATE-ARRAY	
IC301	HH4-3476-000		1	IC, CX06829-11, MODEM	
JP1	WS1-5397-000	N	1	PLUG, JUMPER	

FIGURE 22 SCNT BOARD ASS'Y (FAX-L280)

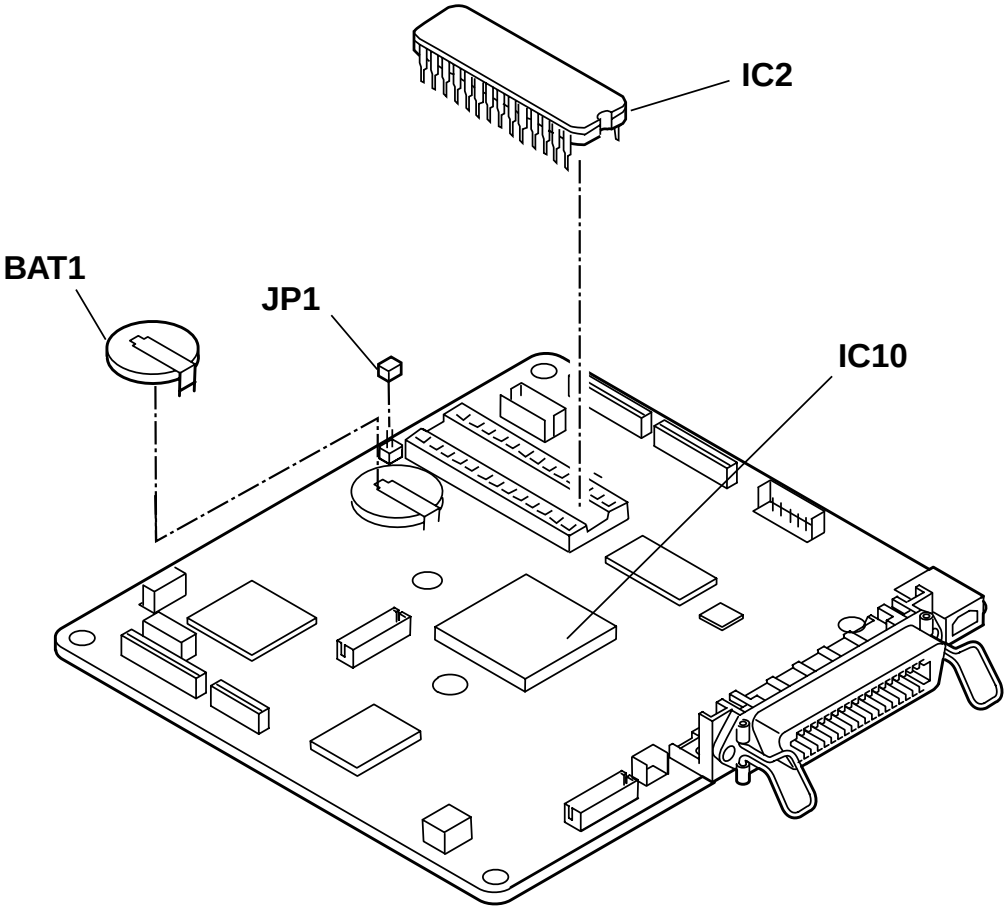

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
22 - BAT1	WK1-5130-000		1	BATTERY, LITHIUM, CR2032/1HS	
IC2	HH4-3452-000		1	IC, MR27V1652D-RA, OTP-ROM	
IC10	HH4-3236-000		1	IC, HG73C051FD, GATE-ARRAY	
JP1	WS1-5397-000	N	1	PLUG, JUMPER	

FIGURE 23 PCNT BOARD ASS'Y

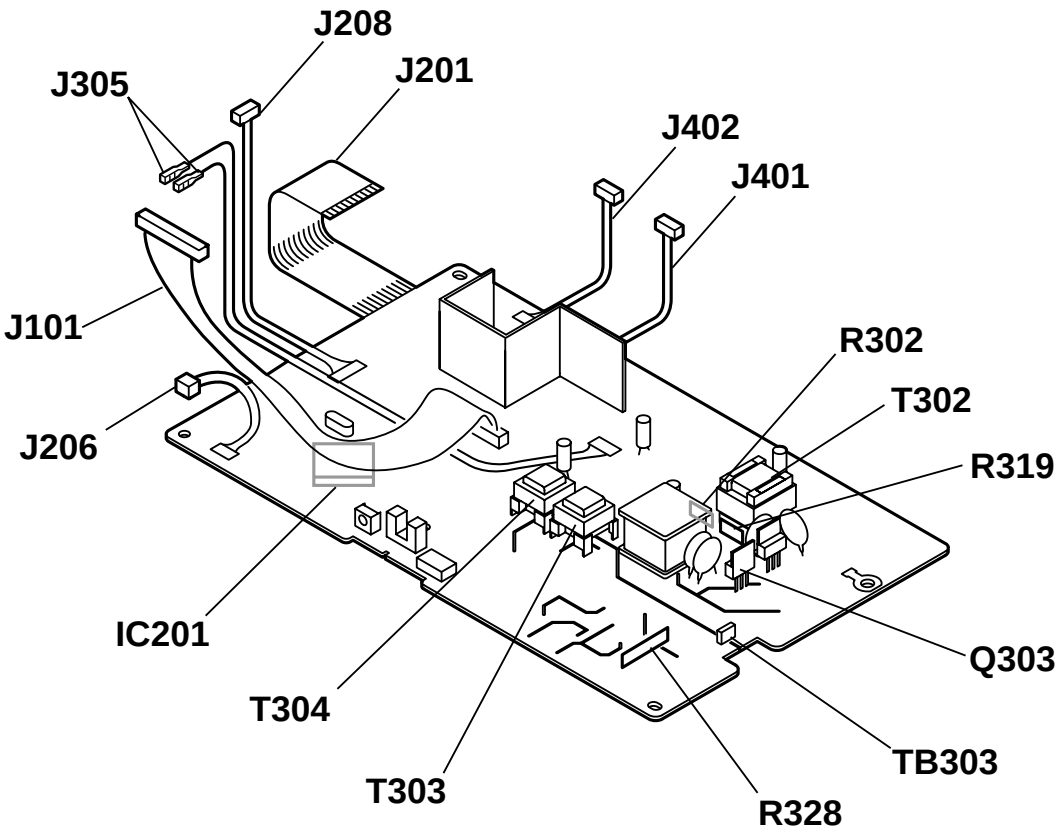

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
23 - IC201	HH4-3474-000		1	IC, MB89063, MCU	
J101	HG5-2581-000		1	CABLE WITH CONNECTOR, 13P	
J201	HH2-3083-000		1	CABLE, FLAT, 19P	
J206	HG5-2577-000		1	CABLE WITH CONNECTOR, 2P	
J208	HG5-2576-000		1	CABLE WITH CONNECTOR, 4P	
J305	HG5-2580-000		1	CABLE WITH CONNECTOR, 2P	
J401	HG5-2579-000		1	CABLE WITH CONNECTOR, 4P	
J402	HG5-2578-000		1	CABLE WITH CONNECTOR, 4P	
Q303	RH6-0119-000		1	TRANSISTOR, 2SC5273-01	
R302	RH6-3857-000		1	RESISTOR, 10MOHM, 0.4W	
R319	RH6-3857-000		1	RESISTOR, 10MOHM, 0.4W	
R328	RH6-3860-000		1	RESISTOR, 100MOHM, 0.4W	
T302	RH3-0248-000		1	TRANSFORMER, 500VA UNDER	
T303	RH3-5016-000		1	TRANSFORMER, 500VA UNDER	
T304	RH3-5016-000		1	TRANSFORMER, 500VA UNDER	
TB303	RH2-5330-000		1	CONNECTOR, 2P	

FIGURE 24 NCU BOARD ASS'Y

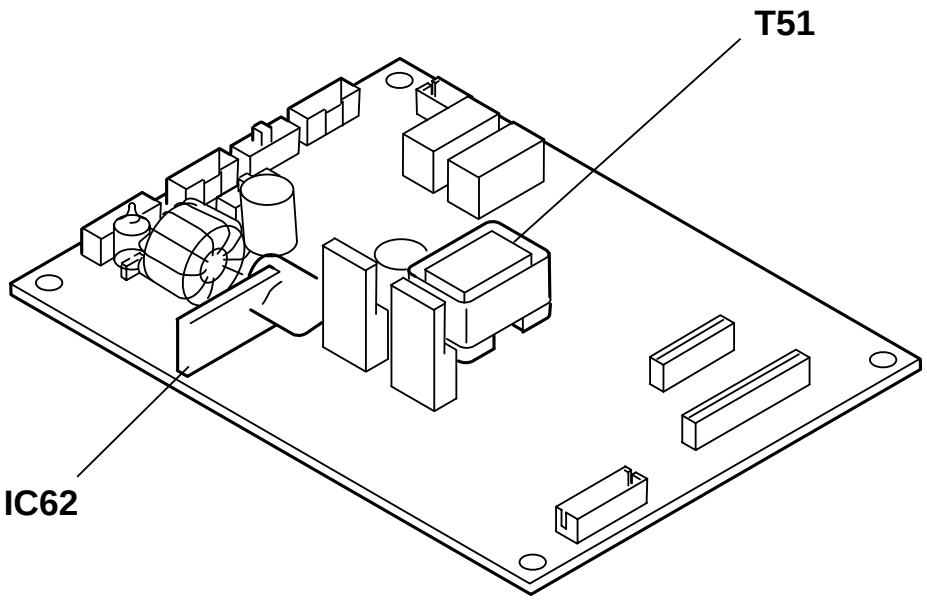

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
24 - IC62	HH7-2528-000		1	IC, THS-65, HYBRID	
T51	HH7-2427-000		1	TRANSFORMER, AUDIO	

FIGURE 25 MODULAR BOARD ASS'Y

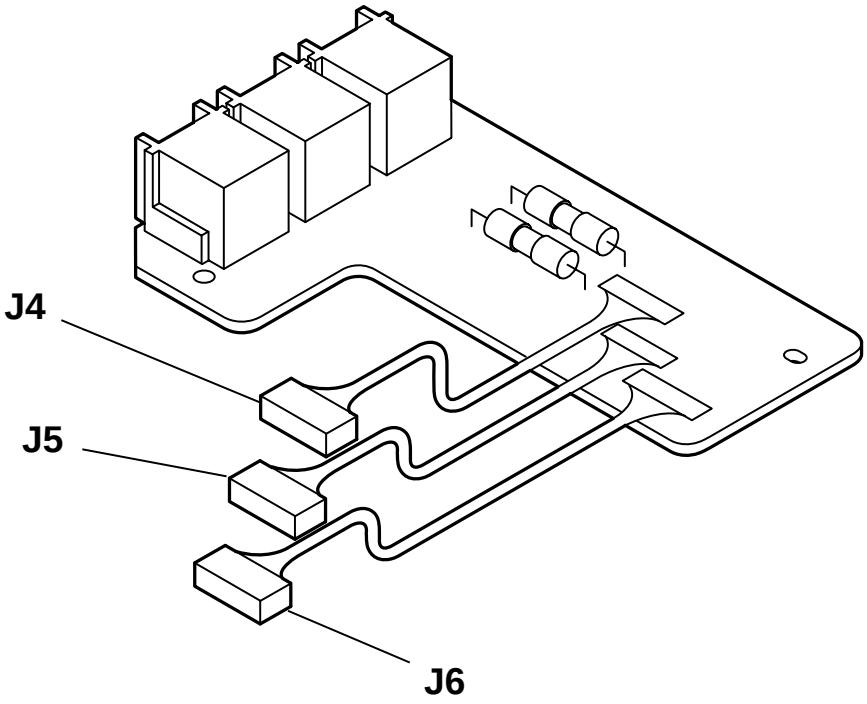

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
25 - J4	HG5-2588-000		1	CABLE WITH CONNECTOR, 6P	
J5	HG5-2589-000		1	CABLE WITH CONNECTOR, 4P	
J6	HG5-2590-000		1	CABLE WITH CONNECTOR, 5P	

FIGURE 26 OPCNT BOARD ASS'Y

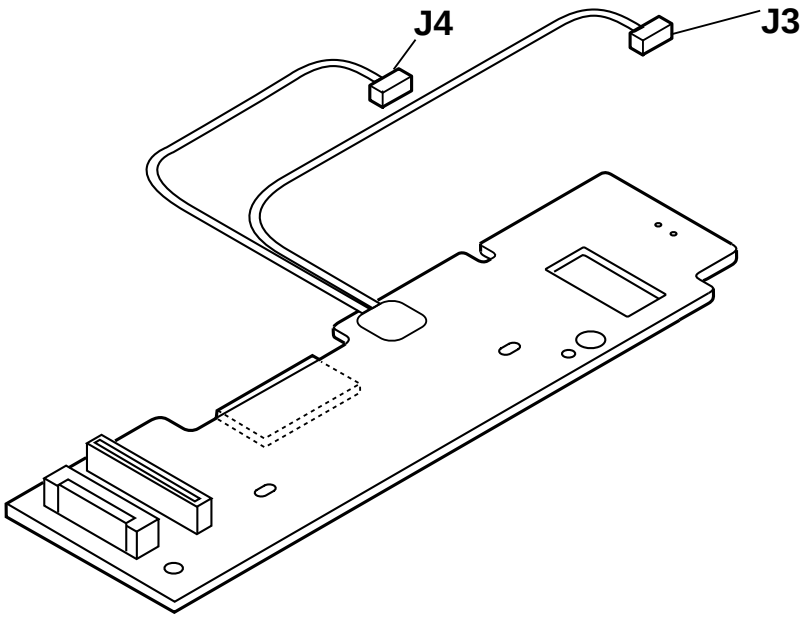

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
26 - J3	HG5-2584-000		1	CABLE WITH CONNECTOR, 3P	
J4	HG5-2585-000		1	CABLE WITH CONNECTOR, 3P	

FIGURE 27 TELEPHONE 6 KIT

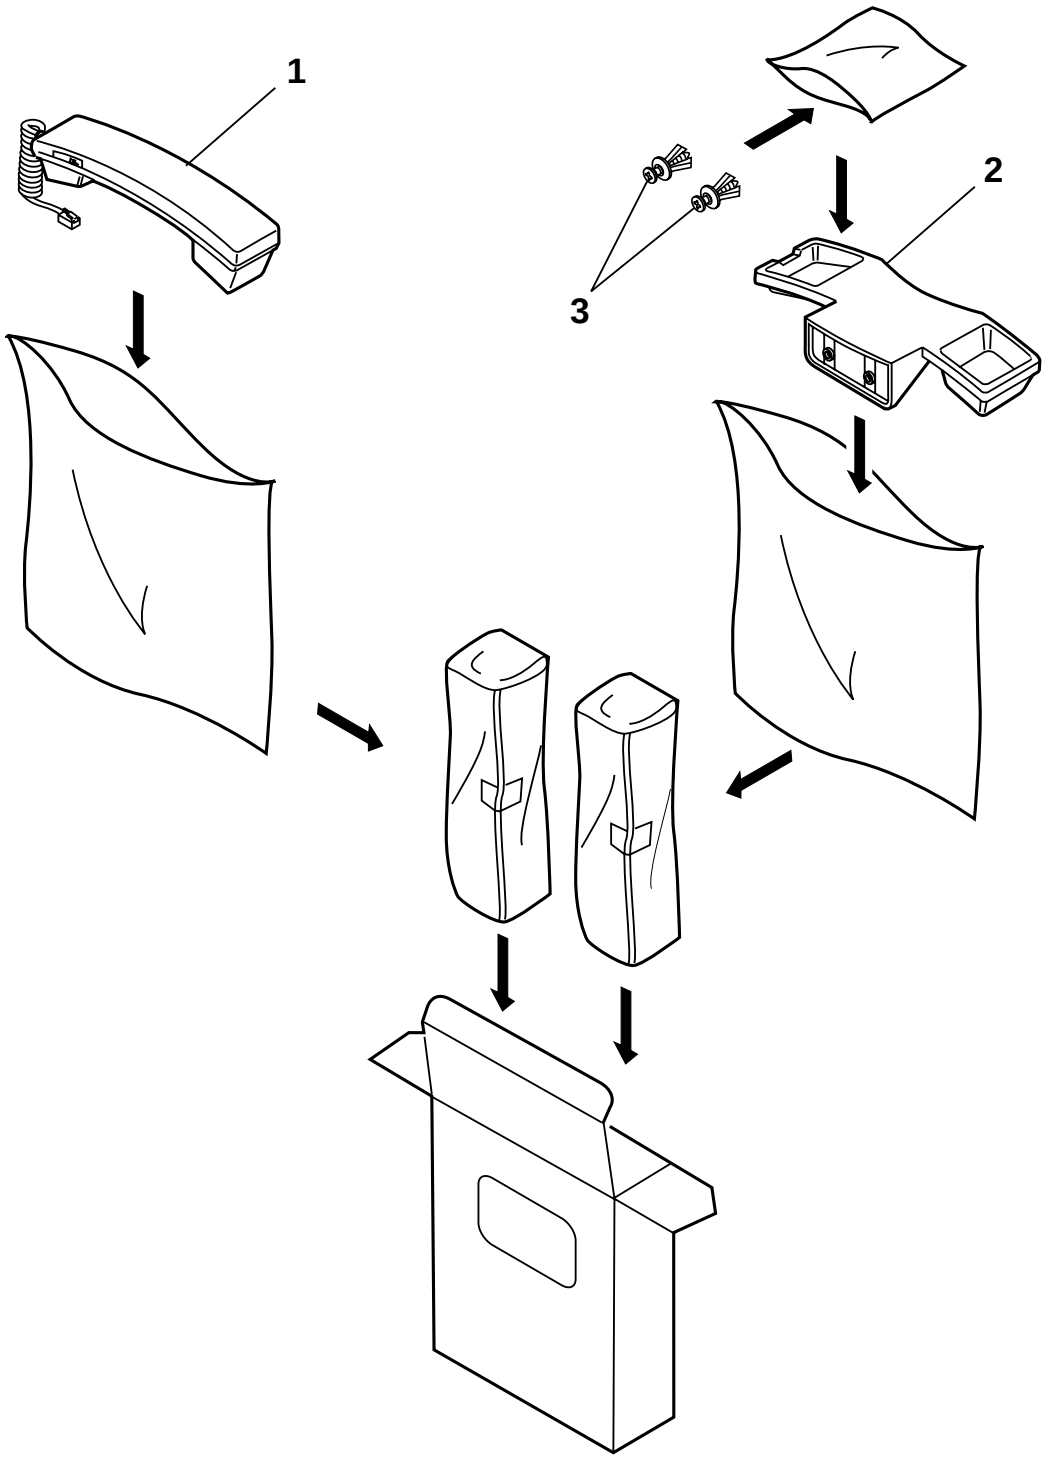

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
27 - 1	HH7-2408-000		1	HANDSET UNIT	EU
	HH7-2460-000		1	HANDSET UNIT	UK
2	HB1-1264-000		1	HANDSET CRADLE	
3	WT2-5465-000		2	RIVET	

3. TOOL

FIGURE 28 TOOLS

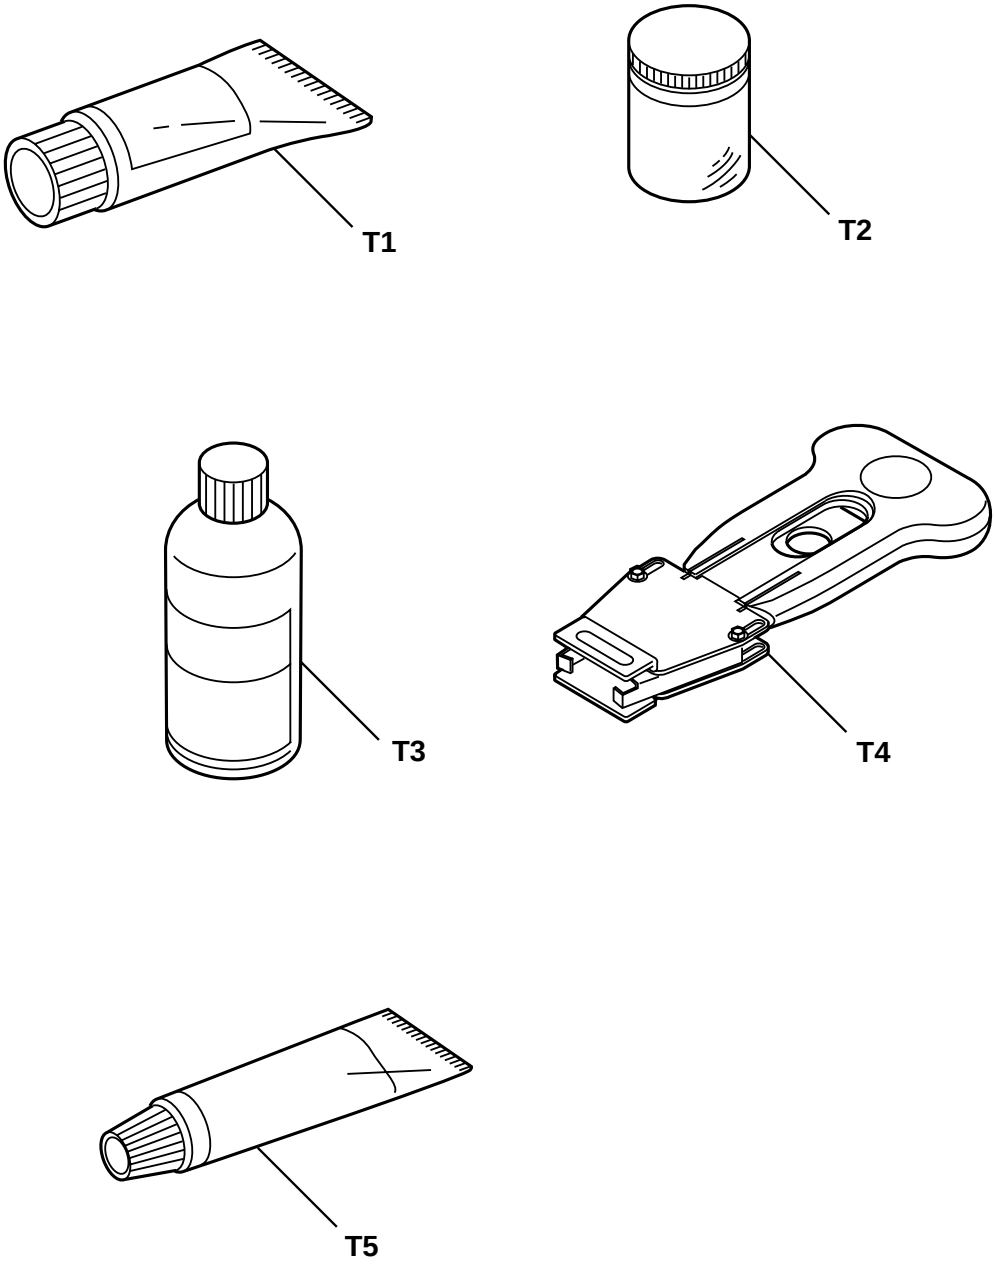

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
28 - T1	HY9-0007-000		1	LUBE, MOLYKOTE EM-50L, GREASE	
T2	CK-8006-000		1	ELECTRICITY GREASE (IF-20)	
T3	CK-0451-000		1	LUBE, UNIWAY 68, OIL	
T4	HY9-0022-000		1	IC-REMOVING TOOL (24-64P)	
T5	HY9-0023-000		1	LUBE, MOLYKOTE EMD-110, GREASE	

4. LUBRICATIONS

4.1 Locations

Some parts are lubricated with grease to ensure smooth operation and to increase conductivity. If lubricated parts are replaced or grease is removed, grease must be reapplied.

4.1.1 ADF UPPER

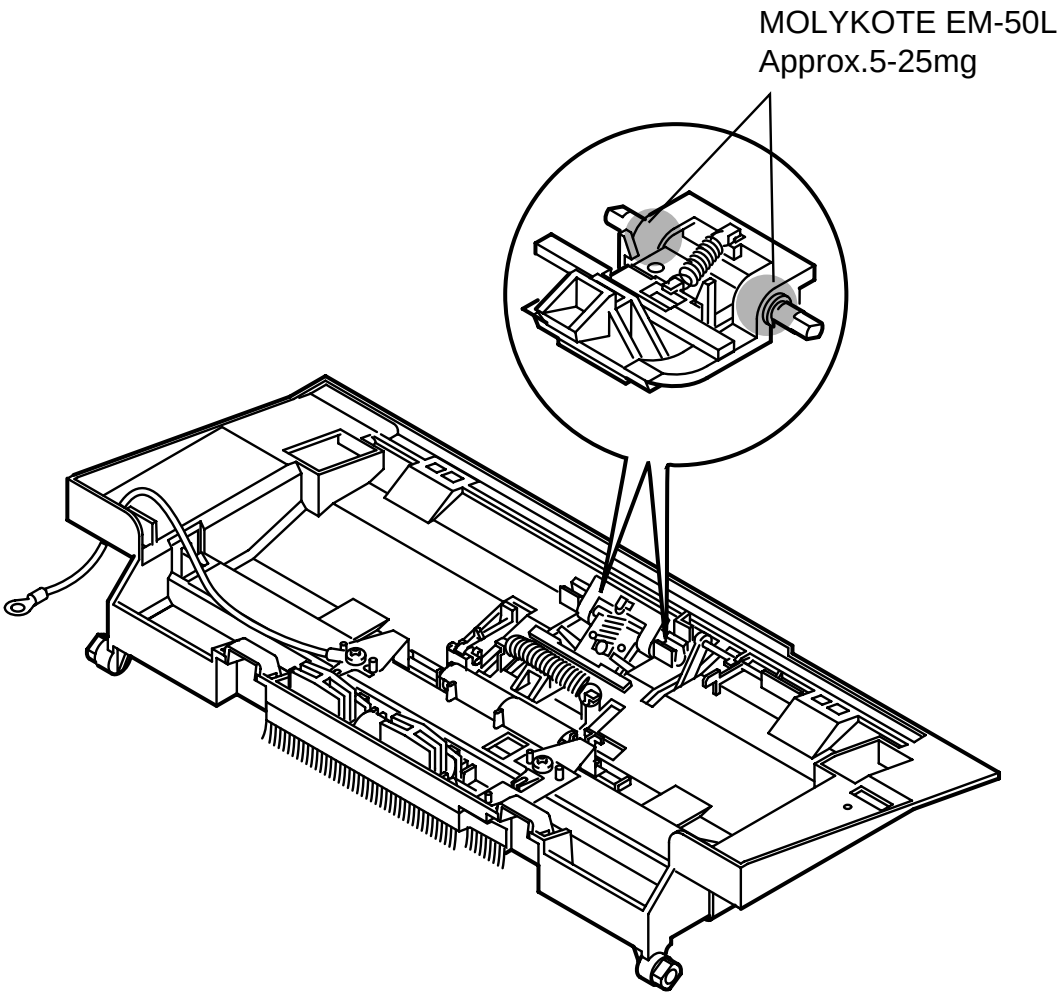

See FIGURE 8 for the disassembly

4.1.2 ADF LOWER

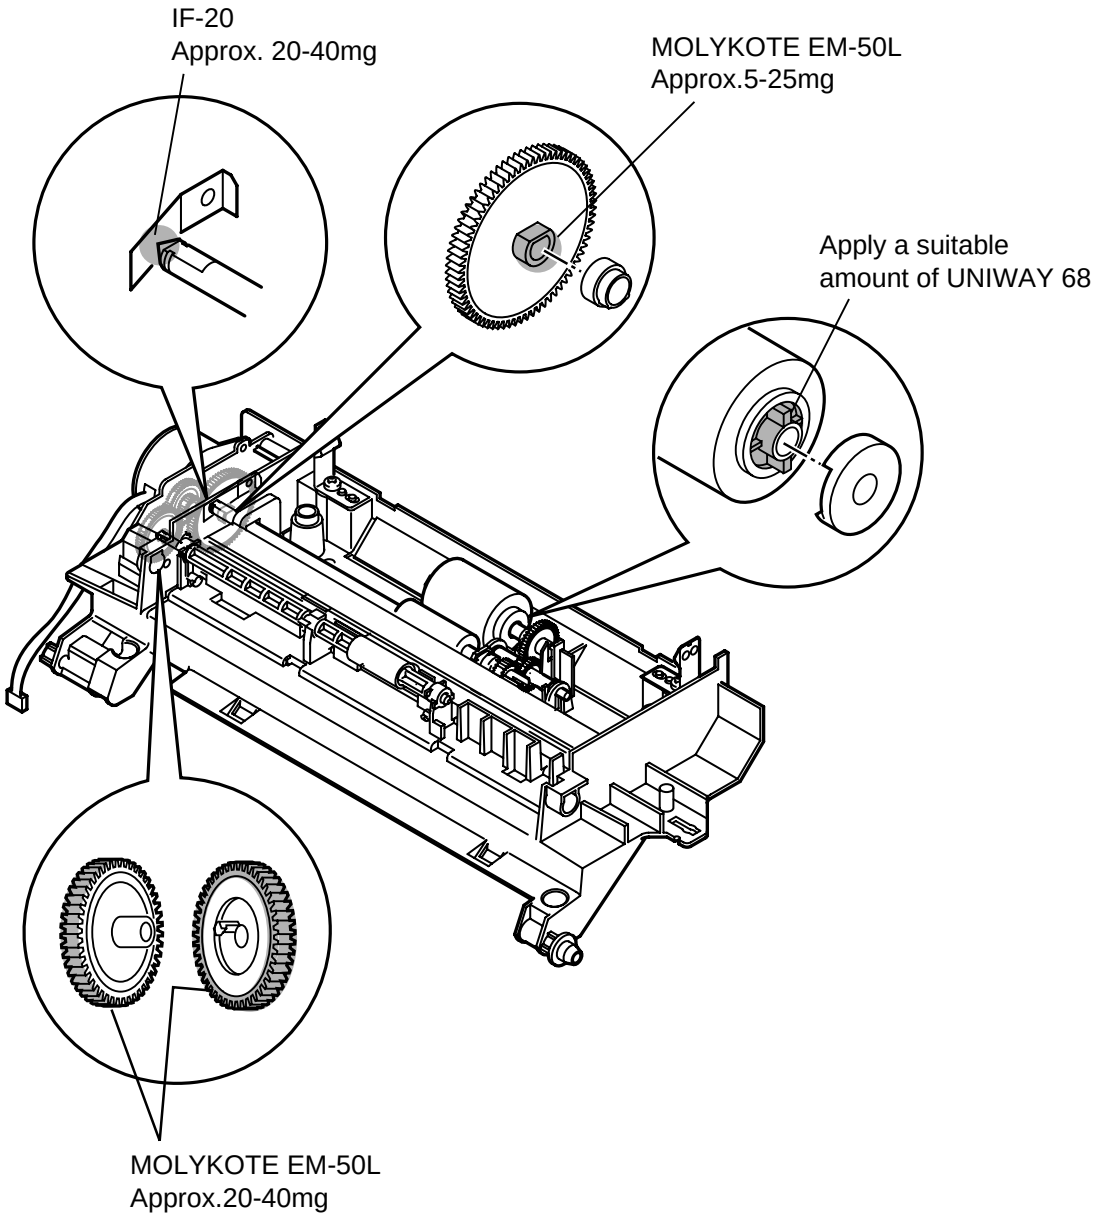

See FIGURE 10 for the disassembly

4.1.3 DRIVE GEARS

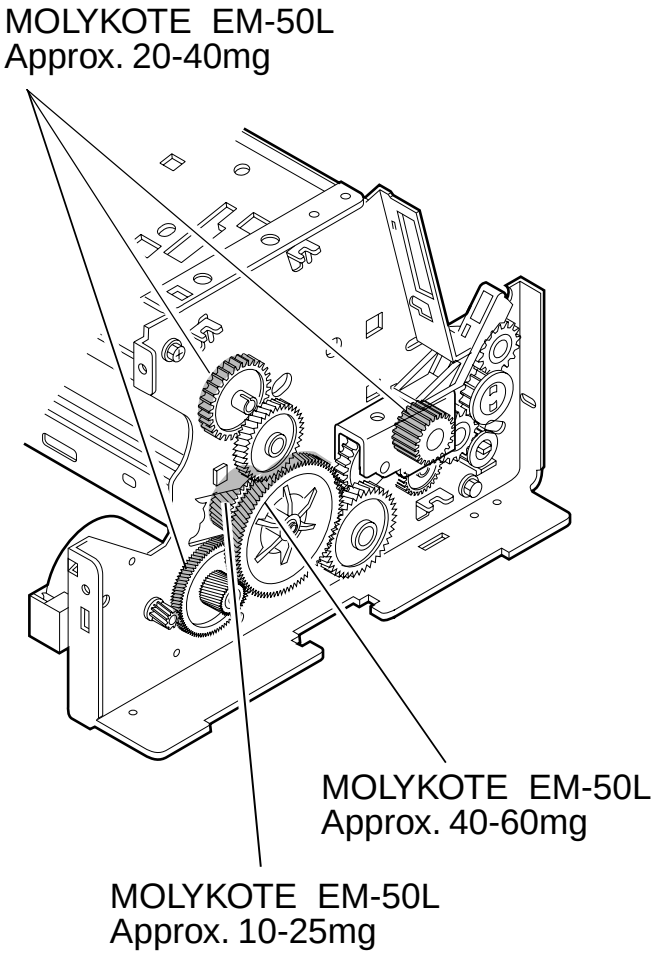

See FIGURE 13 for the disassembly

This page intentionally left blank

5. NUMERICAL INDEX

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
CK-0451-000	28 - T3	LUBE, UNIWAY 68, OIL
CK-8006-000	28 - T2	ELECTRICITY GREASE (IF-20)
HA2-0868-000	1 - 7	LABEL, MERCURY
HB1-1264-000	27 - 2	HANDSET CRADLE
HB1-1779-000	10 - 3	SPACER
HB1-2863-000	8 - 7	STOPPER, DOCUMENT
HB1-2864-000	8 - 8	ROLLER, BACK UP
HB1-2866-000	8 - 9	PLATE, PRESSURE
HB1-2991-000	3 - 1	PIN, TAPER
HB1-3008-000	2 - 6	RACK
HB1-3011-040	16 - 10	HOLDER, TONER SENSOR
HB1-3012-000	16 - 12	SUPPORTER, TONER SENSOR
HB1-3013-000	16 - 9	HOLDER, ROLLER
HB1-3014-000	16 - 14	SUB HOLDER, ROLLER
HB1-3015-000	16 - 13	BELT, TONER SENSOR
HB1-3018-000	11 - 1	STOPPER, TAPE
HB1-3019-000	14 - 5	STOPPER, CARTRIDGE
HB1-3023-000	5 - 8	HOLDER, SPEAKER
HB1-3036-000	10 - 19	PLATE, GROUNDING
HB1-3109-020	10 - 22	STOPPER, CRG
HB1-3257-000	8 - 10	STOPPER, OPERATION PANEL
	10 - 23	
HB1-3418-000	11 - 5	PLATE, GROUNDING
HB1-4072-000	8 - 11	BRUSH, STATIC DISCHARGE
HB1-4261-000	10 - 25	SHEET
HB1-4307-000	10 - 4	ROLLER, DOCUMENT FEED
HB1-4310-000	8 - 12	ARM, DETECTION (DES)
HB1-4324-000	6 - 1	DUCT, AIR
HB1-4357-000	1 - 6	LABEL, DESTINATION
HB1-4361-000	4 - 9	SPACER
	5 - 12	
HB1-4704-000	5 - 13	FOOT, PRINTER
HB1-4813-000	2 - 1	COVER, MAIN
HB1-4814-000	2 - 1	COVER, MAIN
HB1-4815-000	5 - 16	COVER, FRONT
HB1-4816-000	2 - 12	COVER, CONNECTOR
HB1-4817-000	5 - 15	LEVER, FLAPPER
HB1-4818-000	1 - 1	TRAY, SUPPORT
HB1-4819-000	1 - 2	TRAY, MULTI-PURPOSE
HB1-4820-000	1 - 3	COVER, MULTI-PURPOSE TRAY
HB1-4821-000	1 - 4	SUPPORT, DOCUMENT
HB1-4822-000	1 - 5	COVER, OPERATION
	8 - 21	
HB1-4824-000	5 - 10	GUIDE, CABLE
HB1-4825-000	15 - 13	HOLDER, STOPPER
HB1-4826-000	2 - 5	TRAY, AUTO PAPER FEED
HB1-4827-000	2 - 3	GUIDE, AUTO PAPER FEED, LEFT
HB1-4828-000	2 - 4	GUIDE, AUTO PAPER FEED, RIGHT
HB1-4830-000	6 - 2	GUIDE, FACE DOWN
HB1-4831-000	7 - 2	COVER, CARTRIDGE
HB1-4832-000	6 - 4	GUIDE, PAPER EJECT
HB1-4833-000	7 - 3	GUIDE, DOCUMENT FEED, LEFT
HB1-4834-000	7 - 4	GUIDE, DOCUMENT FEED, RIGHT

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
HB1-4835-000	6 - 3	DUCT, AIR
HB1-4836-000	6 - 5	LEVER, ADF RELEASE
HB1-4837-000	9 - 1	HOLDER, SENSOR
HB1-4838-000	8 - 4	FRAME, ADF UPPER
HB1-4839-000	8 - 5	ARM, DETECTION (DS)
HB1-4840-000	8 - 6	GUIDE, DOCUMENT EJECT
HB1-4842-000	9 - 2	COVER, OPERATION PANEL
HB1-4843-000	9 - 3	KEY TOP, DIAL
HB1-4844-000	9 - 4	KEY TOP, ONE TOUCH DIAL
HB1-4845-000	9 - 5	KEY TOP, MAIN
HB1-4846-000	9 - 6	KEY TOP, FUNCTION
HB1-4848-000	8 - 1	COVER, ONE TOUCH DIAL
HB1-4850-000	10 - 1	FRAME, ADF LOWER
HB1-4852-000	8 - 3	SHEET, OPERATION PANEL
HB1-4853-000	8 - 20	SHEET, ONE TOUCH DIAL
HB1-4854-000	1 - 11	LABEL, WARNING
HB1-4855-000	1 - 5	COVER, OPERATION
	8 - 21	
HB1-4856-000	10 - 2	ROLLER, SEPARATION
HB1-4859-000	8 - 3	SHEET, OPERATION PANEL
HB1-4860-000	8 - 20	SHEET, ONE TOUCH DIAL
HB1-4861-000	8 - 3	SHEET, OPERATION PANEL
HB1-4862-000	8 - 20	SHEET, ONE TOUCH DIAL
HB1-5058-000	8 - 22	PLATE, GROUNDING
HF5-0375-000	10 - 16	LOCK, OPERATION PANEL
HF5-0399-000	8 - 18	WHITE SHEET UNIT
HF5-0543-000	10 - 17	ROLLER, DOCUMENT EJECT
HG5-1290-000	11 - 2	ACTUATOR UNIT
HG5-2408-000	12 - 5	FIXING ASS'Y
HG5-2546-000	15 - 23	PICKUP ROLLER ASS'Y
HG5-2548-000	15 - 26	FEEDER ASS'Y
HG5-2549-000	2 - 2	AUTO PAPER FEED ASS'Y
HG5-2556-000	8 - 19	SEPARATION GUIDE ASS'Y
HG5-2557-000	8 - 2	OPERATION PANEL ASS'Y
HG5-2561-000	5 - 9	SPEAKER UNIT
HG5-2562-000	5 - 17	MODULAR BOARD ASS'Y
HG5-2563-000	5 - 2	PCNT BOARD ASS'Y
HG5-2564-000	9 - 10	OPCNT BOARD ASS'Y
HG5-2565-000	4 - 4	SCNT BOARD ASS'Y
HG5-2566-000	4 - 4	SCNT BOARD ASS'Y
HG5-2567-000	5 - 5	CABLE WITH CONNECTOR, 7P
HG5-2568-000	15 - 27	CABLE WITH CONNECTOR, 3P
HG5-2573-000	4 - 8	CABLE WITH CONNECTOR, 6P
HG5-2576-000	23 - J208	CABLE WITH CONNECTOR, 4P
HG5-2577-000	23 - J206	CABLE WITH CONNECTOR, 2P
HG5-2578-000	23 - J402	CABLE WITH CONNECTOR, 4P
HG5-2579-000	23 - J401	CABLE WITH CONNECTOR, 4P
HG5-2580-000	23 - J305	CABLE WITH CONNECTOR, 2P
HG5-2581-000	23 - J101	CABLE WITH CONNECTOR, 13P
HG5-2582-000	5 - 4	CABLE WITH CONNECTOR, 2P
HG5-2583-000	10 - 24	CABLE WITH CONNECTOR, 7P
HG5-2584-000	26 - J3	CABLE WITH CONNECTOR, 3P
HG5-2585-000	26 - J4	CABLE WITH CONNECTOR, 3P

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
HG5-2587-000	4 - 3	NCU BOARD ASS'Y
HG5-2588-000	25 - J4	CABLE WITH CONNECTOR, 6P
HG5-2589-000	25 - J5	CABLE WITH CONNECTOR, 4P
HG5-2590-000	25 - J6	CABLE WITH CONNECTOR, 5P
HG5-2699-000	4 - 7	CABLE WITH CONNECTOR, 6P
HH2-1914-000	1 - 9	MODULAR CORD, 6P
HH2-2074-000	1 - 9	MODULAR CORD (GERM)
HH2-2219-000	1 - 9	MODULAR CORD
HH2-3055-000	9 - 7	CABLE, FLAT, 20P
HH2-3056-000	4 - 1	CABLE, FLAT, 14P
HH2-3057-000	4 - 2	CABLE, FLAT, 23P
HH2-3083-000	23 - J201	CABLE, FLAT, 19P
HH3-5365-000	5 - 3	POWER SUPPLY UNIT
HH4-3236-000	21 - IC10	IC, HG73C051FD, GATE-ARRAY
	22 - IC10	
HH4-3450-000	21 - IC2	IC, MR27V1652D-RA, OTP-ROM
HH4-3452-000	22 - IC2	IC, MR27V1652D-RA, OTP-ROM
HH4-3474-000	23 - IC201	IC, MB89063, MCU
HH4-3476-000	21 - IC301	IC, CX06829-11, MODEM
HH4-3512-000	1 - 12	CD-ROM, DRIVER SOFTWARE
HH7-2408-000	27 - 1	HANDSET UNIT
HH7-2423-000	16 - 11	TONER SENSOR ASS'Y
HH7-2427-000	24 - T51	TRANSFORMER, AUDIO
HH7-2460-000	27 - 1	HANDSET UNIT
HH7-2520-000	10 - 18	CONTACT SENSOR UNIT
HH7-2521-000	9 - 8	LCD UNIT
HH7-2522-000	10 - 20	MOTOR, DOCUMENT FEED
HH7-2528-000	24 - IC62	IC, THS-65, HYBRID
HH7-2529-000	9 - 11	MEMBRANE UNIT
HS1-1063-000	10 - 5	BUSHING
HS5-0254-000	2 - 8	GEAR, Z16
	7 - 6	
HS5-0311-000	10 - 6	GEAR, Z82D
HS5-0312-000	10 - 7	GEAR, Z59D
HS5-0313-000	10 - 8	GEAR, Z21/Z54
HS5-0314-000	10 - 9	GEAR, Z40D
HS5-0315-000	10 - 10	GEAR, Z21D
HS5-0316-000	10 - 11	GEAR, Z21/28B
HS5-1070-030	10 - 12	BUSHING
HS5-1090-000	10 - 13	BUSHING
HS5-2077-000	10 - 14	SPRING, CLUTCH
HS5-2078-000	8 - 13	SPRING
HS5-2129-000	8 - 14	SPRING, WHITE SHEET
HS5-2139-000	16 - 15	SPRING, TONER SENSOR
HS5-2141-020	2 - 7	SPRING, SLIDER
	7 - 5	
HS5-6023-030	8 - 15	ROLLER, BACK UP
HS5-6069-000	8 - 16	ROLLER, DELIVERY
HT1-2166-000	1 - 10	USER'S GUIDE (ENGLISH)
HT1-3099-000	1 - 10	USER'S GUIDE (MODELE FRANCE)
HT1-5075-000	1 - 10	USER'S GUIDE (DEUTSCH)
HY9-0007-000	28 - T1	LUBE, MOLYKOTE EM-50L, GREASE
HY9-0022-000	28 - T4	IC-REMOVING TOOL (24-64P)

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
HY9-0023-000	28 - T5	LUBE, MOLYKOTE EMD-110, GREASE
RB1-7107-000	14 - 6	HOLDER, GEAR
RB1-7129-000	14 - 12	SPRING, GROUNDING
RB1-7130-020	14 - 8	GUIDE, CABLE
RB1-7172-000	15 - 11	SPRING, GROUNDING
RB1-7177-000	15 - 25	FRAME, PAPER FEED
RB1-7184-000	15 - 24	BUSHING
RB1-7185-000	15 - 3	ARM, PLATE, LEFT
RB1-7186-000	15 - 4	ARM, PLATE, RIGHT
RB1-7193-000	16 - 1	CAM, LEFT
RB1-7194-000	16 - 16	CAM, RIGHT
RB1-7197-020	15 - 22	CLUTCH
RB1-7200-030	17 - 7	HOLDER
RB1-7203-000	17 - 2	ARM, PRESSURE
RB1-7205-000	17 - 4	SPRING, TORSION
RB1-7206-000	15 - 10	HOLDER, ARM
RB1-7219-000	15 - 12	STOPPER
RB1-7221-000	15 - 16	SHAFT, DRIVE
RB1-7222-000	15 - 17	BUSHING
RB1-7224-000	15 - 19	RATCHET
RB1-7236-000	19 - 8	PIN, CONTACT
RB1-7237-000	19 - 6	PIN, CONTACT
RB1-7246-000	14 - 9	BUSHING
RB1-7247-000	12 - 4	GUIDE, PAPER
RB1-7277-000	20 - 4	SPRING, TORSION
RB1-7284-020	18 - 3	ROLLER, FACE DOWN
RB1-7286-000	18 - 4	SPRING, WIRE
RB1-7287-000	18 - 6	SPRING, WIRE
RB1-7288-020	12 - 11	BUSHING
RB1-7293-030	20 - 1	LEVER, SENSOR
RB1-7294-000	20 - 2	SPRING, TORSION
RB1-7334-000	18 - 7	GUIDE, JAMMED PAPER REMOVAL
RB1-7341-030	12 - 10	GUIDE, SUB, CARTRIDGE, RIGHT
RB1-7344-020	5 - 1	COVER, AC CABLE
RB1-8170-000	13 - 1	LEVER, RELEASE, D
RB2-1633-000	16 - 7	ROLLER, SUB
RB2-1654-000	19 - 9	BLOCK, TRANSFER
RB2-1655-000	19 - 2	BUSHING
RB2-1657-000	19 - 1	ELIMINATOR, STATIC CHARGE
RB2-1668-000	12 - 2	RUBBER, CONTINUITY
RB2-1685-000	18 - 5	ROLLER, FACE UP
RB2-1686-000	18 - 2	FRAME
RB2-1687-000	20 - 5	GUIDE, SEPARATION
RB2-1689-000	20 - 8	ROD, REINFORCEMENT
RB2-1690-000	20 - 7	BUSHING
RB2-1691-000	20 - 3	SPRING, LEAF
RB2-1699-000	17 - 1	ROLLER
RB2-1700-030	17 - 3	LEVER, REGISTRATION SENSOR
RB2-1701-000	16 - 5	ROLLER, FEED
RB2-1703-000	16 - 3	ROLLER, SUB
RB2-1706-000	15 - 1	SHEET, SEPARATION
RB2-6214-000	19 - 4	BUSHING
RB2-6220-000	5 - 6	COVER, WATERPROOF

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
RB2-6221-000	15 - 6	ARM, SEPARATION
RB2-6223-000	16 - 8	ROLLER, PAPER PICK-UP
RF5-1492-000	15 - 8	PAD, LEFT
RF5-1493-000	15 - 9	PAD, RIGHT
RF5-1513-000	13 - 2	ARM, SWING
RF5-1514-020	14 - 1	GUIDE, CARTRIDGE,LEFT
RF5-1515-020	14 - 4	GUIDE, CARTRIDGE
RF5-1533-000	14 - 11	PLATE, CONTINUITY
RF5-1534-000	14 - 2	ROLLER, TRANSFER
RF5-2358-000	14 - 3	GUIDE, TRANSFER
RF5-2367-000	12 - 13	ROLLER, FEEDER
RF5-2368-000	20 - 6	ROLLER, FACE UP
RF5-2372-000	15 - 2	PLATE, MIDDLE
RF5-3256-000	11 - 9	MOUNT, SENSING LEVER
RF5-5479-000	12 - 3	ROLLER, PRESSURE
RG5-1947-000	15 - 21	FEEDER DRIVE ASS'Y
RG5-3475-040	14 - 13	SEPARATION GUIDE ASS'Y
RG5-3476-030	20 - 9	FLAPPER
RG5-3492-000	16 - 6	FEED ROLLER ASS'Y, LEFT
RG5-5473-000	11 - 4	SCANNER ASS'Y
RG5-5481-000	14 - 14	TRANSFER BLOCK ASS'Y
RG5-5482-000	12 - 8	DELIVERY ASS'Y
RH2-5330-000	23 - TB303	CONNECTOR, 2P
RH3-0248-000	23 - T302	TRANSFORMER, 500VA UNDER
RH3-5016-000	23 - T303	TRANSFORMER, 500VA UNDER
	23 - T304	
RH6-0119-000	23 - Q303	TRANSISTOR, 2SC5273-01
RH6-3857-000	23 - R302	RESISTOR, 10MOHM, 0.4W
	23 - R319	
RH6-3860-000	23 - R328	RESISTOR, 100MOHM, 0.4W
RH7-1450-000	13 - 13	MOTOR, STEPPING, DC 4.8W
RH7-5265-000	15 - 14	SOLENOID
RS5-0786-000	15 - 20	GEAR, 24T
RS5-0788-000	13 - 7	GEAR, 32T/93T
RS5-0789-000	13 - 4	GEAR, 37T
RS5-0790-000	13 - 8	GEAR, 54T/19T
RS5-0791-000	13 - 3	GEAR, 36T
RS5-0793-000	13 - 9	GEAR, 22T
RS5-0794-000	13 - 10	GEAR, 24T
RS5-0796-000	12 - 1	GEAR, 27T
RS5-0797-000	12 - 12	GEAR, 18T
RS5-0798-000	13 - 11	GEAR, 15T
RS5-0799-000	13 - 5	GEAR, 51T/17T
RS5-2501-000	15 - 5	SPRING, COMPRESSION
RS5-2502-000	15 - 7	SPRING, COMPRESSION
RS5-2503-000	17 - 5	SPRING, COMPRESSION
RS5-2504-000	19 - 3	SPRING, COMPRESSION
RS5-2505-000	19 - 5	SPRING, COMPRESSION
RS5-2508-000	12 - 6	SPRING, COMPRESSION
RS5-2510-000	15 - 18	SPRING, COMPRESSION
RS5-2512-000	19 - 7	SPRING, COMPRESSION
RS5-8543-020	18 - 1	LABEL, "WARNING HIGH TEMP"
RS6-0380-000	13 - 6	GEAR, 23T/98T

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
VS1-5057-002	14 - 10	CONNECTOR, 2P
WG8-5362-000	9 - 9	PHOTO-INTERRUPTER, TLP1241
	17 - 6	
WK1-5130-000	21 - BAT1	BATTERY, LITHIUM, CR2032/1HS
	22 - BAT1	
WS1-5397-000	21 - JP1	PLUG, JUMPER
	22 - JP1	
WT2-0317-000	4 - 5	CLIP, CABLE
	5 - 11	
WT2-5026-000	4 - 6	CLIP, CABLE
WT2-5134-000	11 - 10	CLAMP, CABLE
WT2-5465-000	27 - 3	RIVET
WT3-5020-000	1 - 8	CORD, POWER
WT3-5058-000	1 - 8	CORD, POWER
XA9-0476-000	2 - 9	SCREW, TP M3X8
	7 - 7	
XA9-0724-000	14 - 7	SCREW, M3X8
XA9-0863-000	4 - 11	SCREW, TAP M3X6
	5 - 18	
XA9-0931-000	2 - 10	SCREW, RS, M3X12
XA9-1261-000	11 - 7	SCREW, TP, M3X8
XA9-1262-000	15 - 15	SCREW, M4X10
XA9-1263-000	13 - 12	SCREW, TP, M3X5
XB1-2300-407	10 - 21	SCREW, BH3X4 (S)
XB1-2300-807	3 - 2	SCREW, CROSS-RECESS, FCH
	4 - 10	
XB2-7300-607	5 - 7	SCREW, M3X6
XB3-6300-800	5 - 14	SCREW, RS, M3X8
	11 - 6	
	12 - 9	
XB4-7300-807	8 - 17	SCREW, TAP TIGHT, BINDING HEAD
	10 - 15	
	11 - 8	
XB4-7301-009	8 - 23	SCREW, BINDING HEAD SELF-TPG
	9 - 12	
XB4-7301-409	2 - 11	SCREW, TAPPING M3X14
XB4-7401-007	6 - 6	SCREW, PAN HEAD SELF-TAPPING
	7 - 8	
XB6-7300-807	12 - 7	SCREW, TP, M3X8
XD9-0131-000	16 - 4	RING,E
XD9-0159-000	16 - 2	PIN, DOWEL

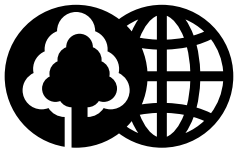

This publication is printed on 100% recycled paper.

Canon

PRINTED IN JAPAN (IMPRIME AU JAPON) 0201GR0.00-0 CANON INC.